






XYZ

Dive into your next dimension


AIRONE

AIRONE 300 X Mesh
Instructions manual

A Package details



 x23	 x7	 x8
Motherboard screw	The power screw	HDD screw
 x3	 x6	
Copper pillar	Cable Tie	

B Schematic diagram of wire interface

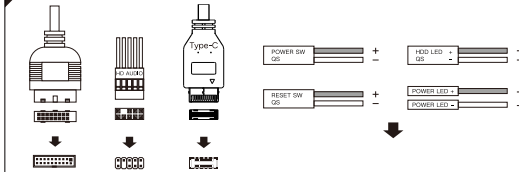


Please refer to the manual that came with your motherboard for any specific connection instructions


C Product size

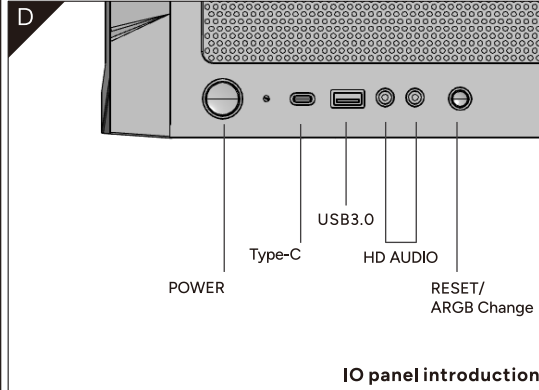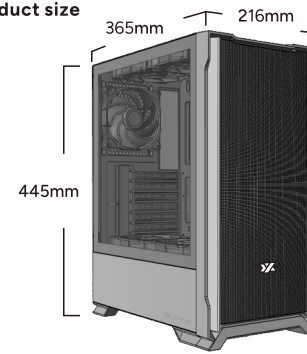


E Machine overview

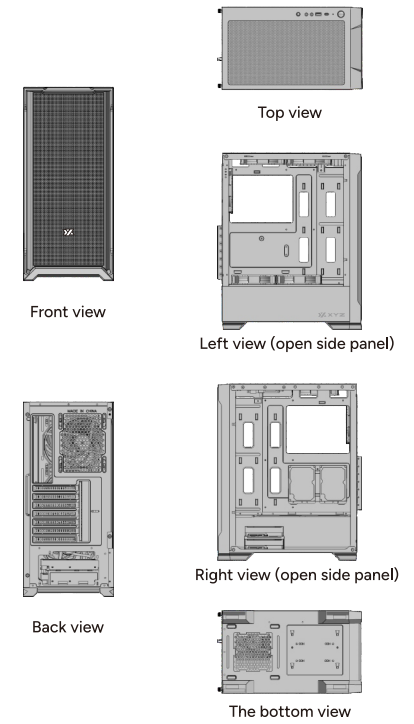

F Chassis disassembly diagram

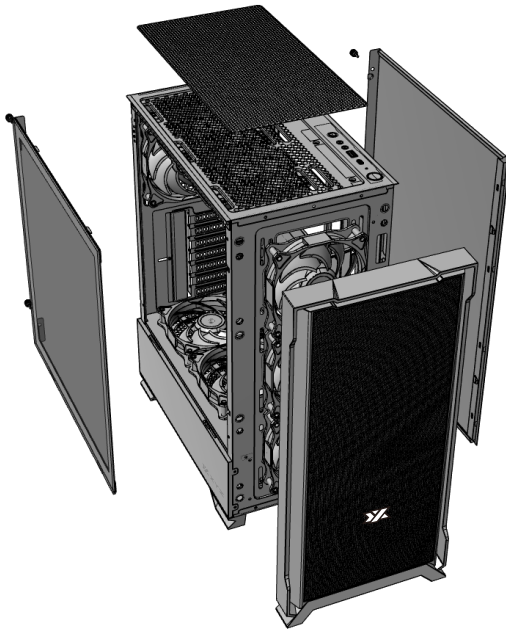


G Remove and install side panels

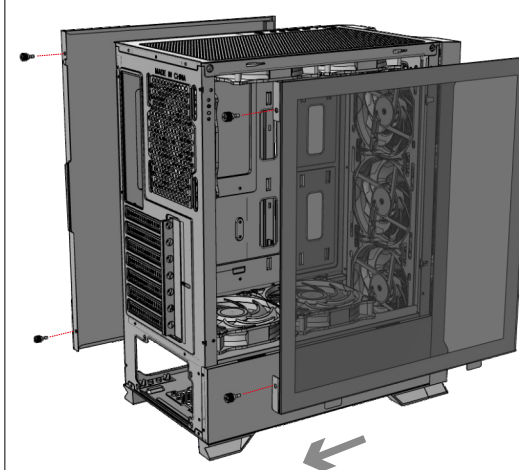


Remove the glass side panel: Slide the glass side panel backward.
Remove the iron side plate: remove the two screws at the rear.

H The power supply installation

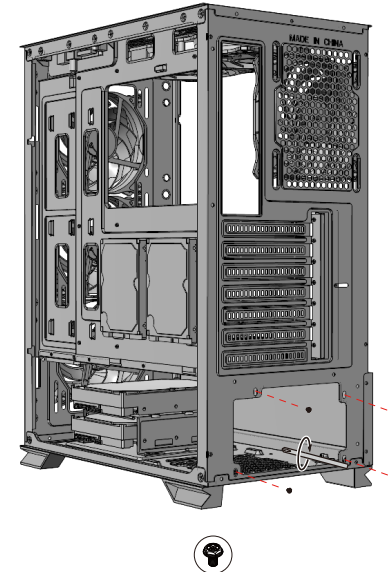


The power supply can be fixed by aligning the screw in the figure to the hole position
Note: different types of power supply, hole location may be slightly different, take the actual object as the standard

I Motherboard installation

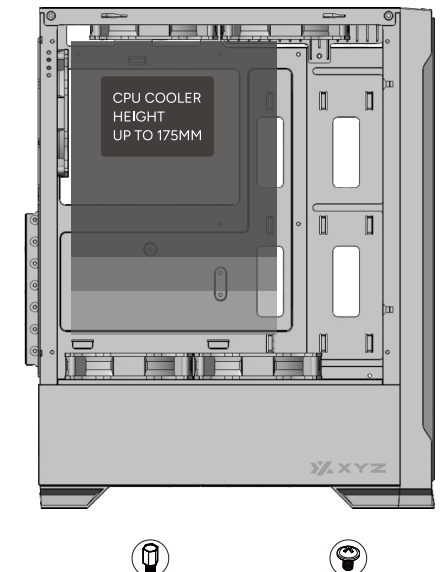

According to the motherboard type (ATX/M-ATX/ITX), the copper pillars may need to be re-arranged manually according to the fixing locations specific to your motherboard
CPU Height limit: 175mm

J The graphics card installation

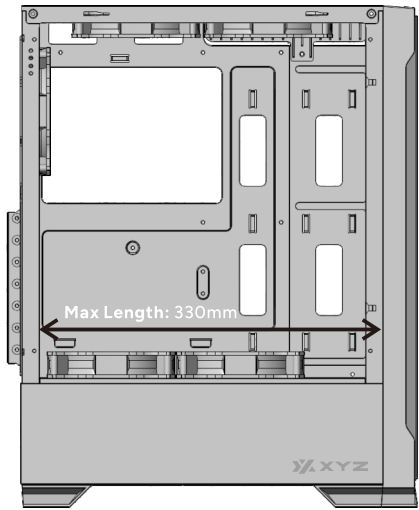


K Panel



To remove the front panel of the case, pull it by hand, firmly from the bottom of the panel


L Fan installation

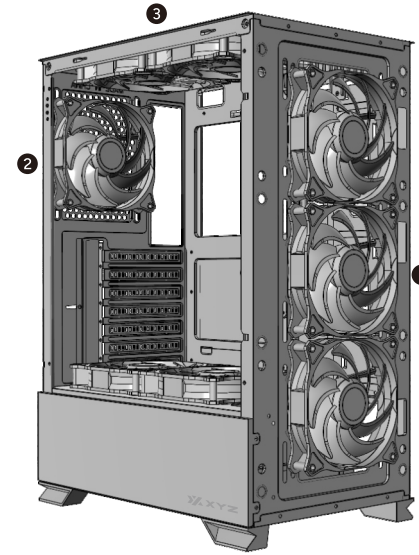

Fan compatibility

- ① Front: 3 x 120/2 x 140mm
- ② Rear: 1 x 120mm
- ③ Top: 2 x 120/140mm
- ④ PSU cover: 2 x 120mm


M Water cooling installation

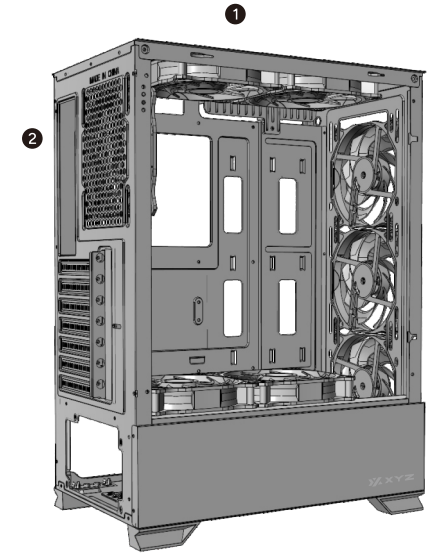

Radiator Support

- ① Top: 240/280mm
- ② Rear: 120mm


N SSD installation

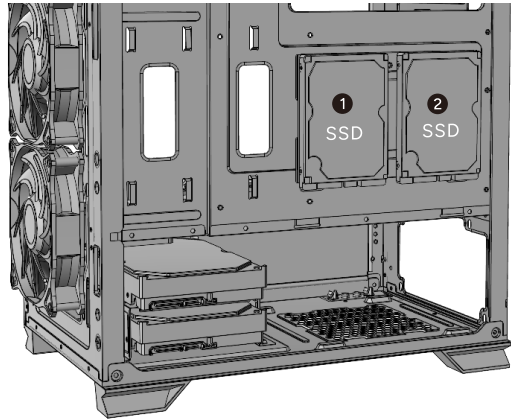

2*SSD

Align the SSD holes and fix them with screws.


O HDD installation

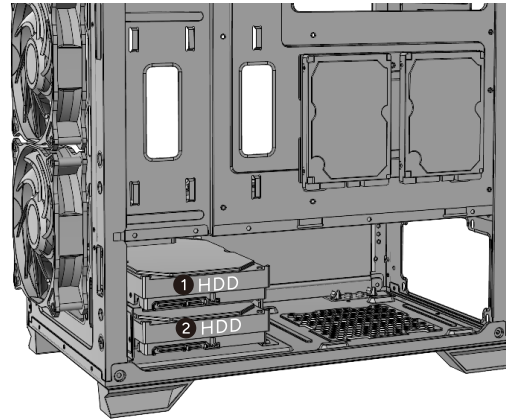


2*HDD

Align the hard disk holes and fix them with HDD screws.


P Fan interface

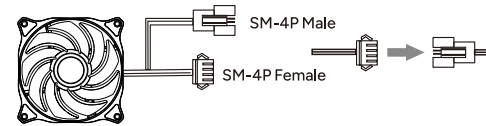

SM-4P Female connect with SM-4P Male, after connecting of all the Femal+Male until Main fan's Male.

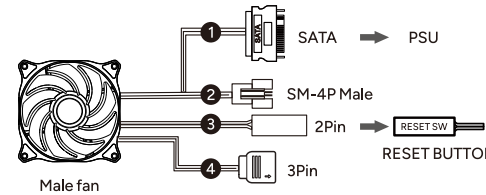

④ 3 Pin Female connect to Motherboard's 5V 3Pin male

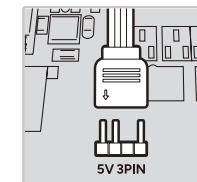

Find out more about us at www.xyzpcgear.com