








Dive into your next dimension


AIRWAVE

Instructions manual

A Package details


| | | |
|---|---|--|
|  Motherboard screw |  The power screw |  HDD screw |
|  Copper pillar |  Cable Tie | |

B Schematic diagram of wire interface

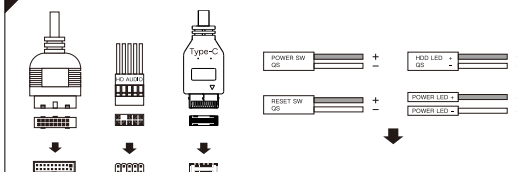


Please refer to the manual that came with your motherboard for any specific connection instructions


C Product size

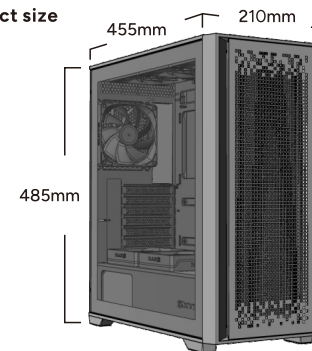


D IO panel introduction

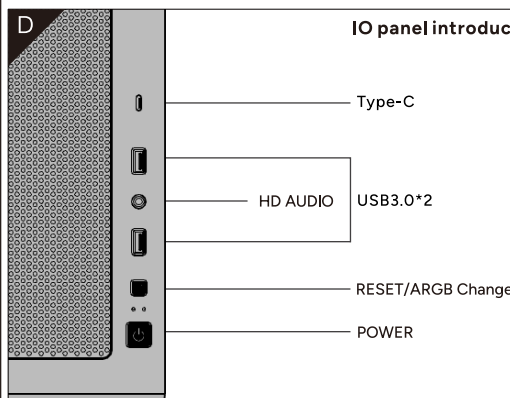


E Machine overview

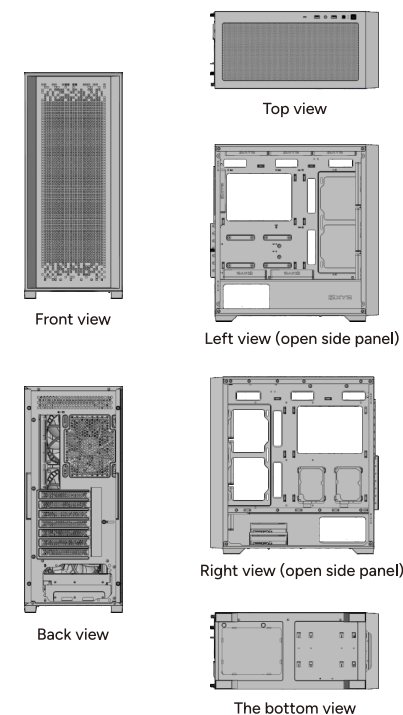

F Chassis disassembly diagram

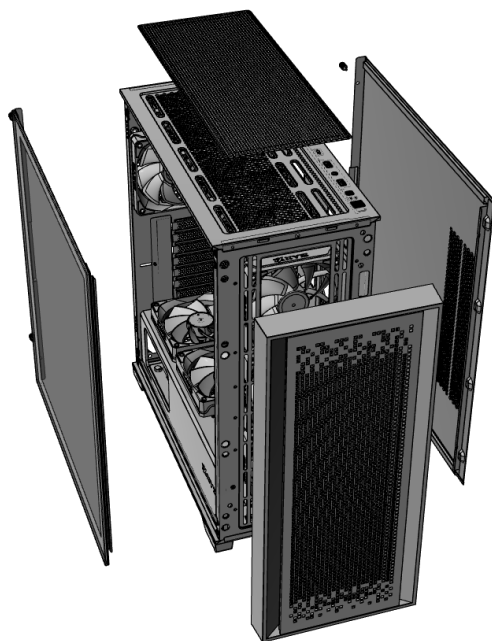


G Remove and install side panels

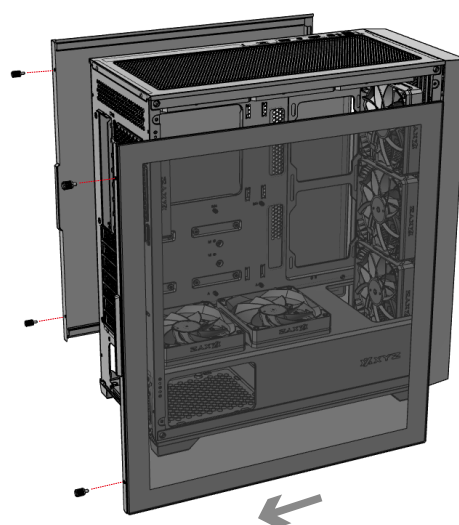


Remove the glass side panel: Slide the glass side panel backward.
Remove the iron side plate: remove the two screws at the rear.

H The power supply installation

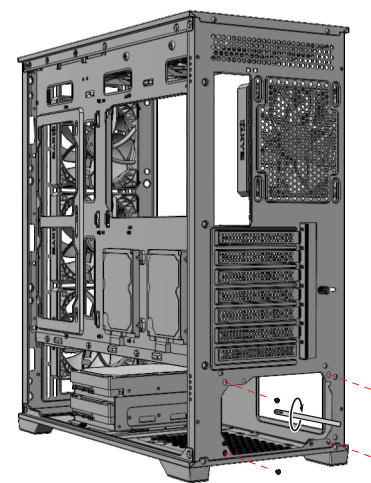

The power supply can be fixed by aligning the screw in the figure to the hole position
Note: different types of power supply, hole location may be slightly different, take the actual object as the standard

I Motherboard installation

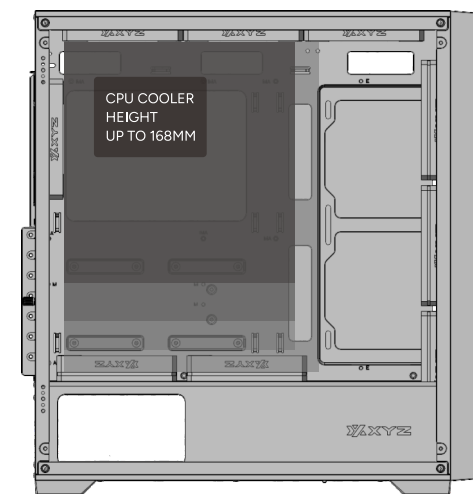

According to the motherboard type (E-ATX/ATX/M-ATX/ITX), the copper pillars may need to be re-arranged manually according to the fixing locations specific to your motherboard
CPU Height limit: 168mm

