








Dive into your next dimension


AURORAX 100

Instructions manual

A Package details


 x12	 x8	 x12
Motherboard screw	The power screw	HDD screw
 x3	 x5	
Copper pillar	Cable Tie	

B Schematic diagram of wire interface

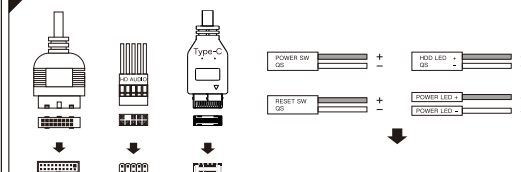


Please refer to the manual that came with your motherboard for any specific connection instructions


C Product size

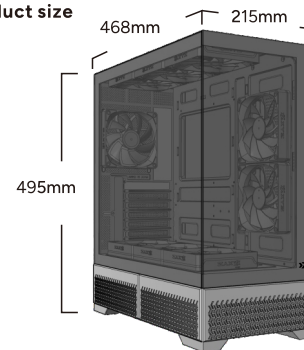


D IO panel introduction

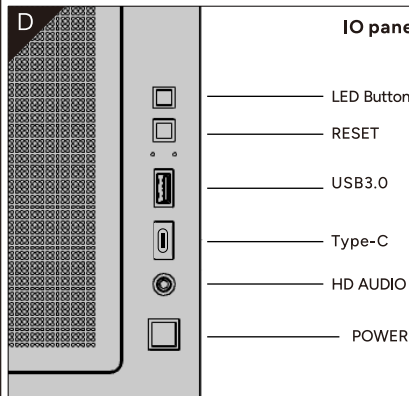

E Machine overview

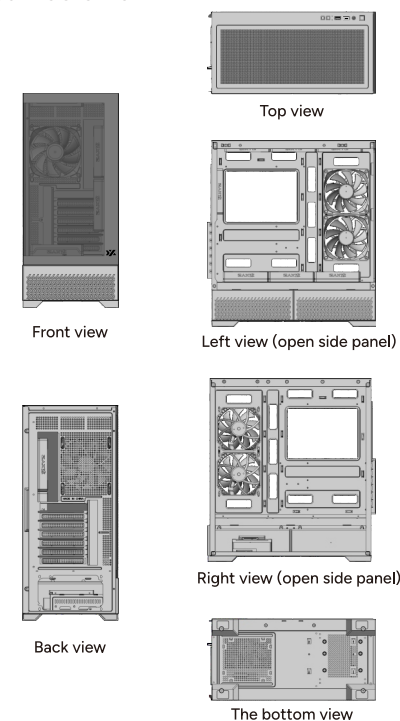


F Chassis disassembly diagram

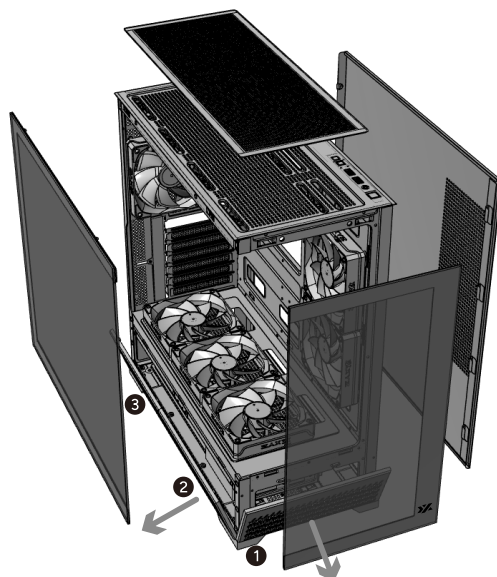


The magnetic attraction components are interchangeable.

G Remove and install side panels

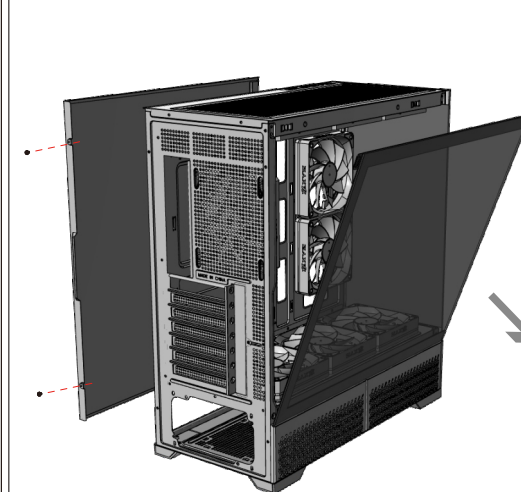


The way of Side glass panel opens is by Clip (without screws). Remove the iron side plate: remove the two screws at the rear.

H The power supply installation

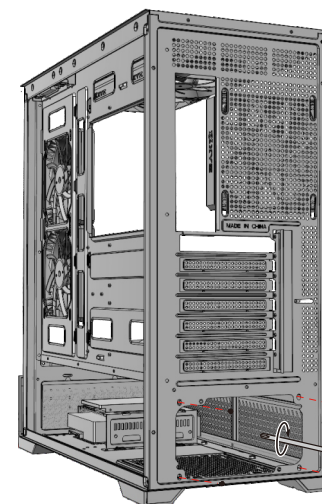

The power supply can be fixed by aligning the screw in the figure to the hole position
Note: different types of power supply, hole location may be slightly different, take the actual object as the standard

I Motherboard installation

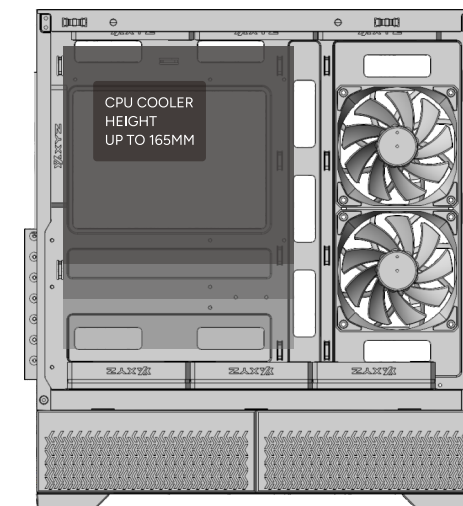

According to the motherboard type (ATX/M-ATX/ITX), the copper pillars may need to be re-arranged manually according to the fixing locations specific to your motherboard
CPU Height limit: 165mm

