








Dive into your next dimension


AURORAX 100 PRO

Instructions manual

A Package details


| | | |
|--|--|---|
|  x12 |  x8 |  x12 |
| Motherboard screw | The power screw | HDD screw |
|  x3 |  x5 | |
| Copper pillar | Cable Tie | |

B Schematic diagram of wire interface

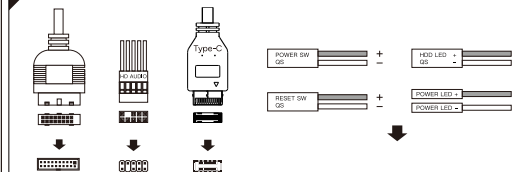


Please refer to the manual that came with your motherboard for any specific connection instructions


C Product size

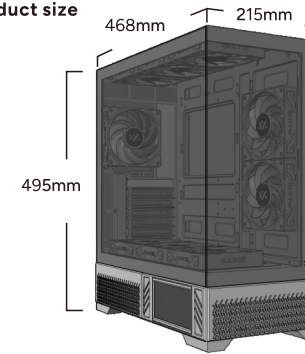


D IO panel introduction

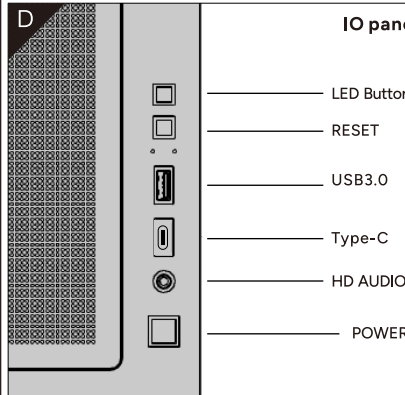

E Machine overview

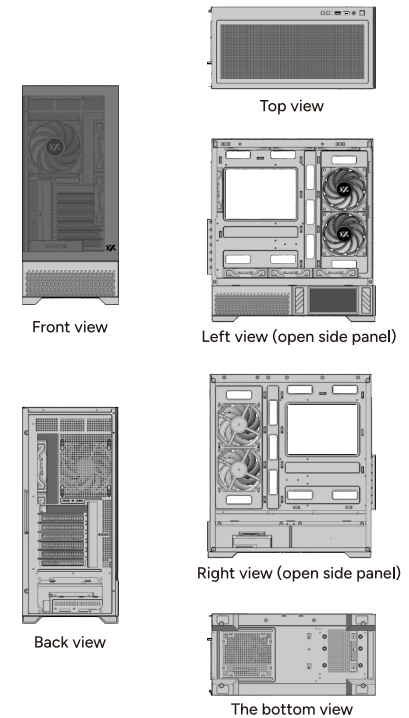


F Chassis disassembly diagram

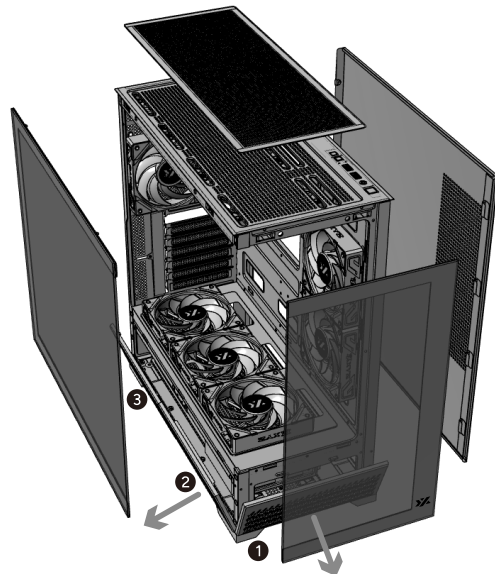


The magnetic attraction components are interchangeable.

G Remove and install side panels

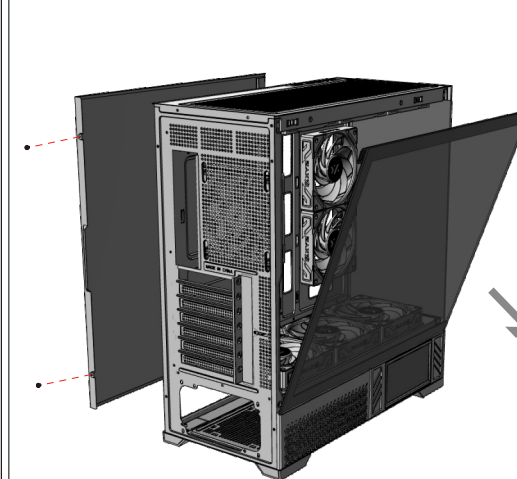


The way of Side glass panel opens is by Clip (without screws). Remove the iron side plate: remove the two screws at the rear.

H The power supply installation

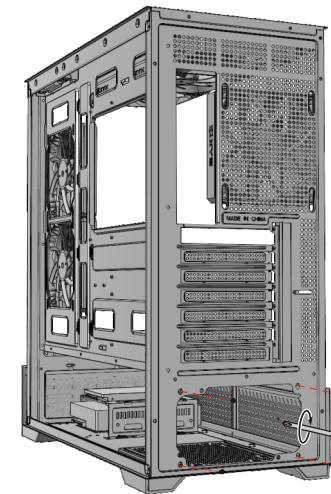


The power supply can be fixed by aligning the screw in the figure to the hole position
Note: different types of power supply, hole location may be slightly different, take the actual object as the standard

I Motherboard installation

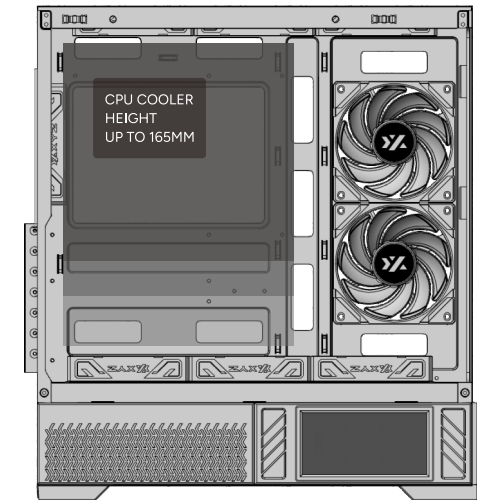


According to the motherboard type (ATX/M-ATX/ITX), the copper pillars may need to be re-arranged manually according to the fixing locations specific to your motherboard
CPU Height limit: 165mm

J The graphics card installation

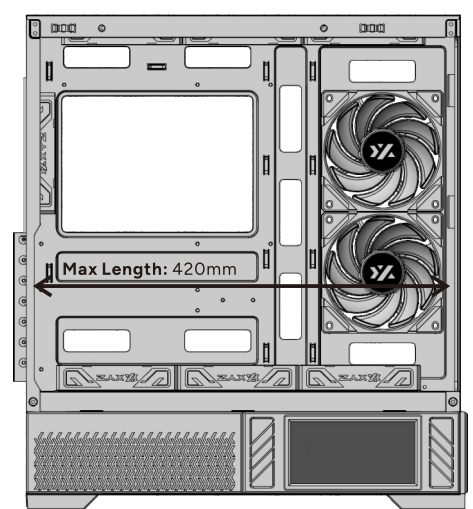


K Panel disassembly

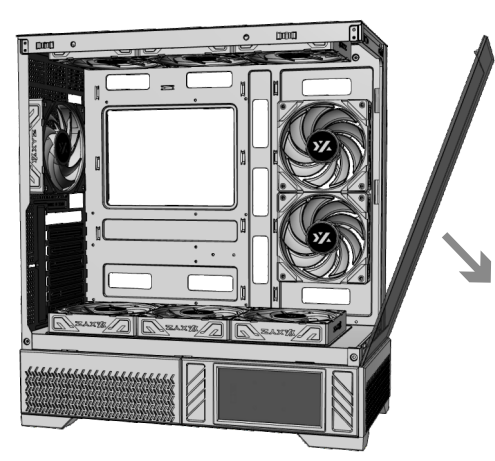

The way of Front glass panel opens is by Clip (without screws).


L Fan installation

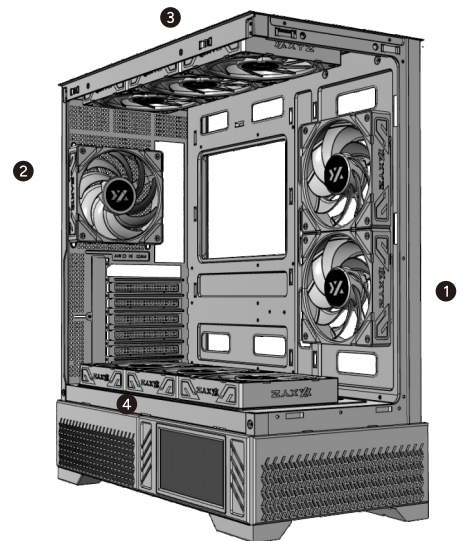

Fan compatibility

- ① MB tray: 2 x 120mm
- ② Rear: 1 x 120mm
- ③ Top: 3 x 120 / 2 x 140mm
- ④ Bottom: 3 x 120mm


M Water cooling installation

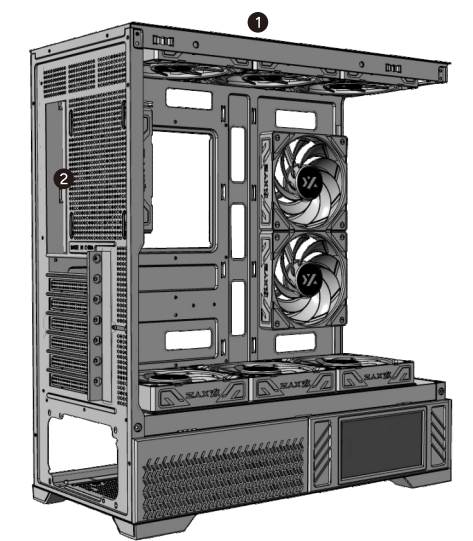

Radiator Support

- ① Top: 240/280/360mm
- ② Rear: 120mm

N SSD/HDD installation

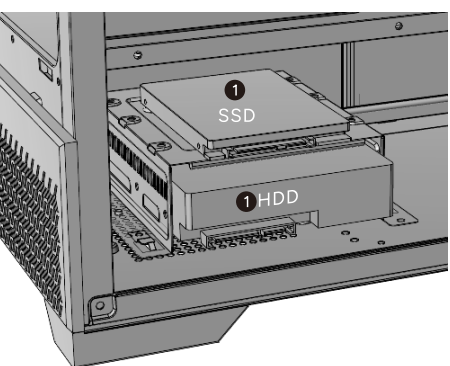


1*SSD 1*HDD

Push the SSD/HDD into the slot, align the screw holes, and lock the screws.

O Connect the LCD display

Step 1: Install the software on the desktop.
Unzip "Aurorax 100 PRO" software and install the program on the computer desktop.

Step 2: Connect the USB cable of the display.
Plug the USB cable of the display into the USB 2.0 port on the motherboard.

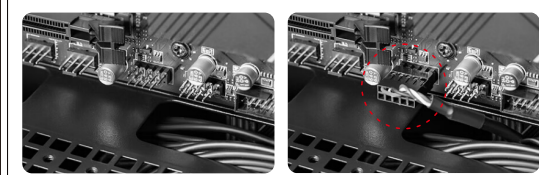

Step 3: Launch the software and customize display settings.
Open the Aurorax 100 PRO software, You can choose from the existing themes or customize a theme according to your preferences.

Operation Suggestions:


- To select a preset theme: Browse the theme library and click on the desired style to apply it directly.
- To customize a theme: Adjust elements such as the color scheme, font style, background pattern, etc., until the personalized needs are met.

IMPORTANT!

- 1- THE SCREEN REQUIRES SPECIAL SOFTWARE TO WORKS.
- 2- IMPORTANT! SHOULD INSTALL THE SOFTWARE YOU WILL FIND IN THE DOWNLOAD PAGE FOR THE SCREEN WORKS.
- 3- PLEASE SCAN THIS QR, SEARCH FOR YOUR PRODUCT AND DOWNLOAD THE SOFTWARE.



P PWM function + ARGB controller user instruction

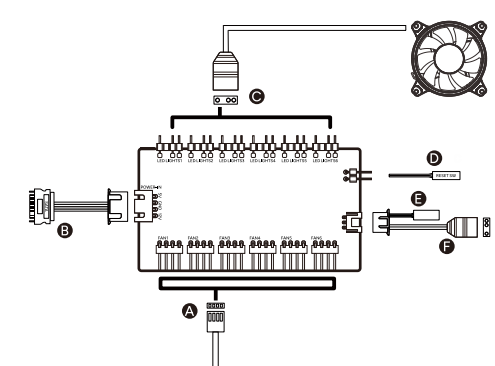

- A Connected with 3 pcs small PWM 4PIN.
 - B SATA power connector (PSU).
 - C Interface for 5V3PIN LED wire, support 6pcs FANS.
 - D Can switch to the computer reset button.
 - E PWM speed adjusting line.
 - F Universal link to motherboard 5V 3pin connector.
- To use this feature, hold down the reset key for 5 seconds.

XYZ

Find out more about us at www.xyzpcgear.com