

XYZ

Dive into your next dimension


NEUTRON

NEUTRON X
Instructions manual

A Package details


 x18	 x6	 x9
Motherboard screw	The power screw	HDD screw
 x3	 x5	
Copper pillar	Cable Tie	

B Schematic diagram of wire interface

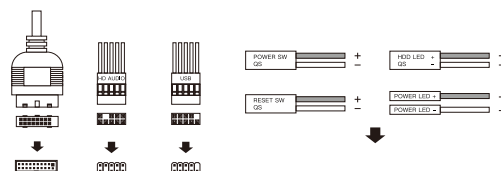


Please refer to the manual that came with your motherboard for any specific connection instructions

C Product size

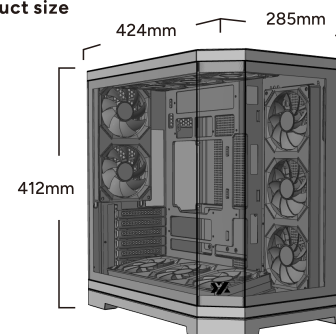


D

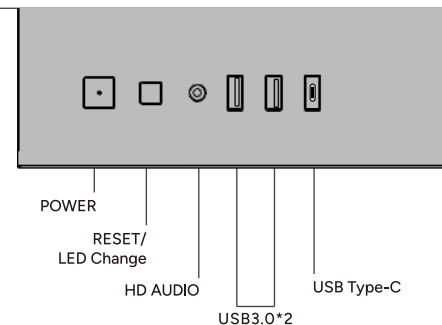


IO panel introduction


E Machine overview

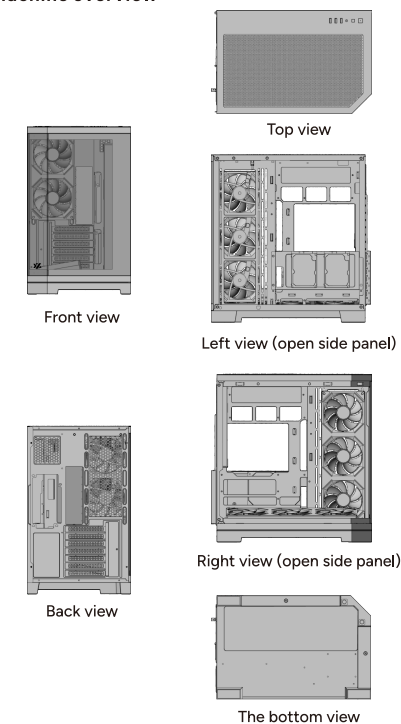

F Chassis disassembly diagram

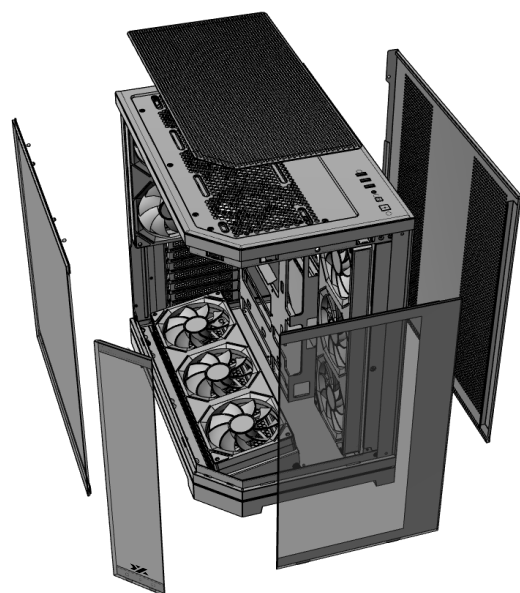


G Remove and install side panels

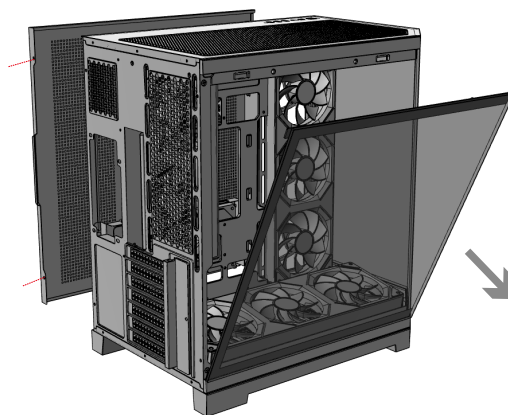


The way of Side glass panel opens is by Clip (without screws). Remove the iron side plate: remove the two screws at the rear.

H The power supply installation

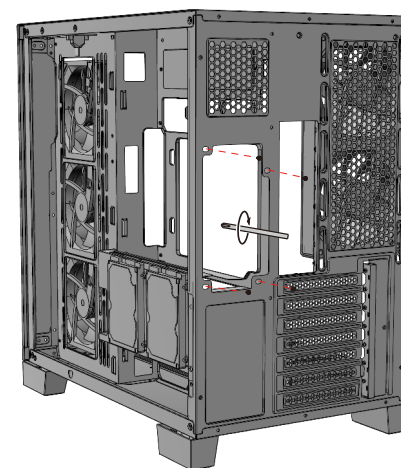


The power supply can be fixed by aligning the screw in the figure to the hole position
Note: different types of power supply, hole location may be slightly different, take the actual object as the standard

I Motherboard installation

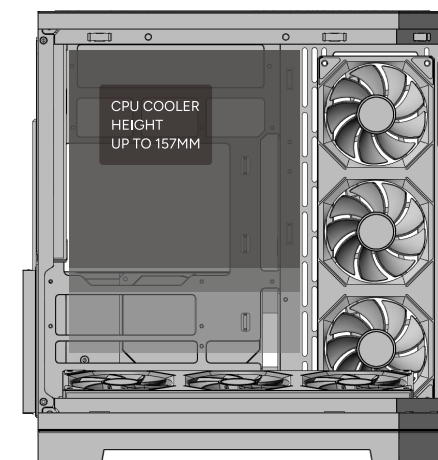


According to the motherboard type (ATX/M-ATX/ITX), the copper pillars may need to be re-arranged manually according to the fixing locations specific to your motherboard
CPU Height limit: 157mm

J The graphics card installation

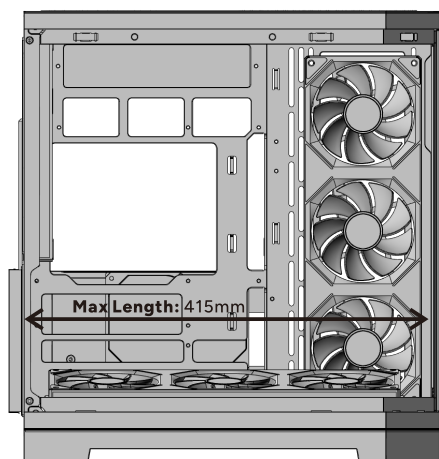


K Panel disassembly

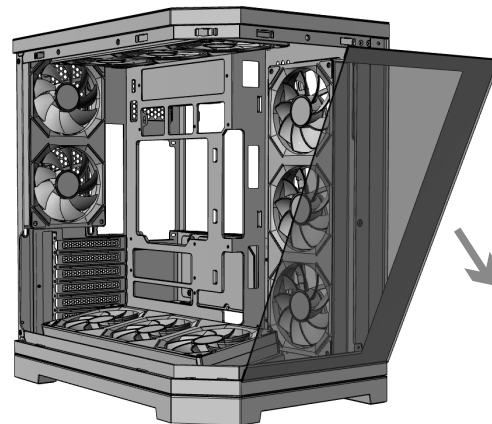

The way of Front glass panel opens is by Clip (without screws).


L Fan installation

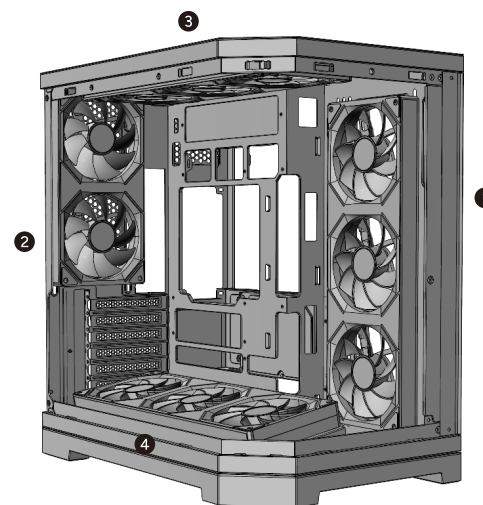

Fan compatibility

- ① MB tray: 3 x 120/ 2 x 140mm
- ② Rear: 2 x 120mm
- ③ Top: 3 x 120/ 2 x 140mm
- ④ Bottom: 3 x 120mm


M Water cooling installation

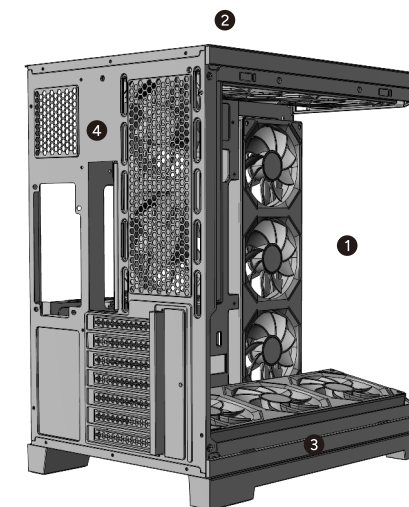

Radiator Support

- ① MB tray: 280/240mm
- ② Top: 360/280/240mm
- ③ Bottom: 360/280/240mm (Removed fan bracket)
- ④ Rear: 120mm


N SSD installation

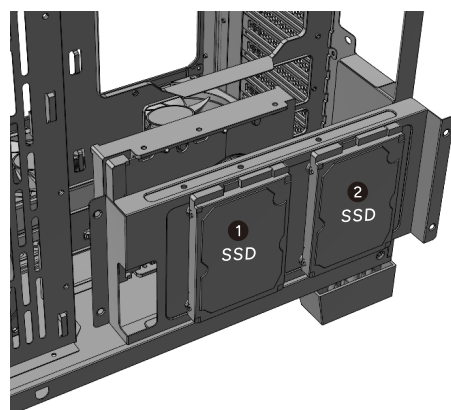

2*SSD

Align the SSD holes and fix them with screws.


O HDD installation

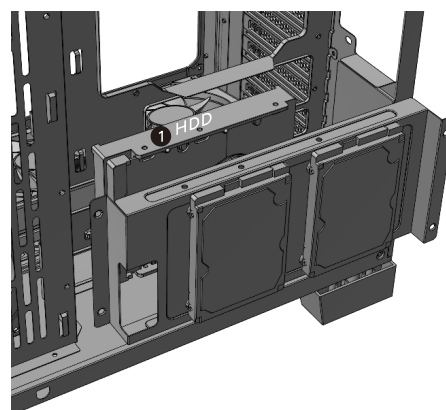

1*HDD

Align the hard disk holes and fix them with HDD screws.

P PWM function + ARGB controller user instruction

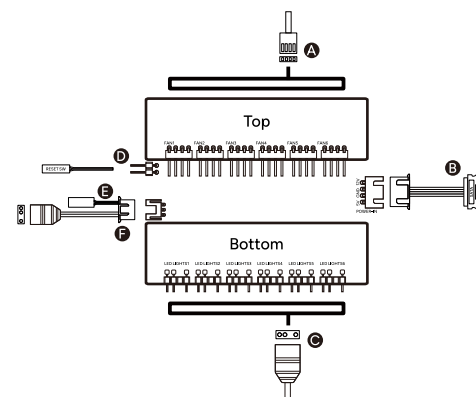

- A Connected with 3 pcs small PWM 4PIN.
 - B SATA power connector (PSU).
 - C Interface for 5V3PIN LED wire, support 6pcs FANS.
 - D Can switch to the computer reset button.
 - E PWM speed adjusting line.
 - F Universal link to motherboard 5V 3pin connector.
- To use this feature, hold down the reset key for 5 seconds.
- The same side on the top and bottom

XYZ



Find out more about us at
www.xyzpcgear.com