

XYZ

Dive into your next dimension


NEUTRON

NEUTRON X PRO
Instructions manual

A Package details


 x18	 x6	 x9
Motherboard screw	The power screw	HDD screw
 x3	 x5	
Copper pillar	Cable Tie	

B Schematic diagram of wire interface

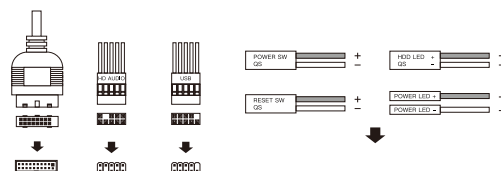


Please refer to the manual that came with your motherboard for any specific connection instructions

C Product size

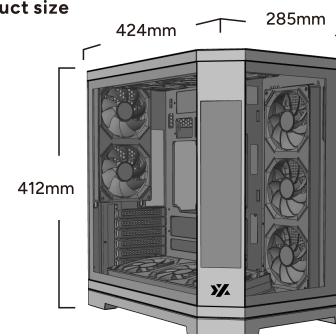


D

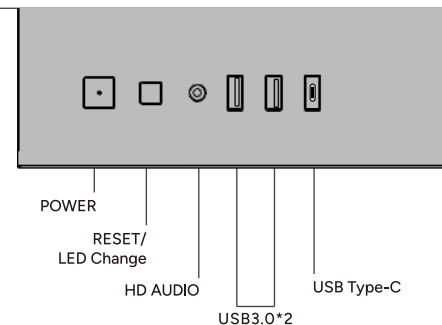


IO panel introduction


E Machine overview

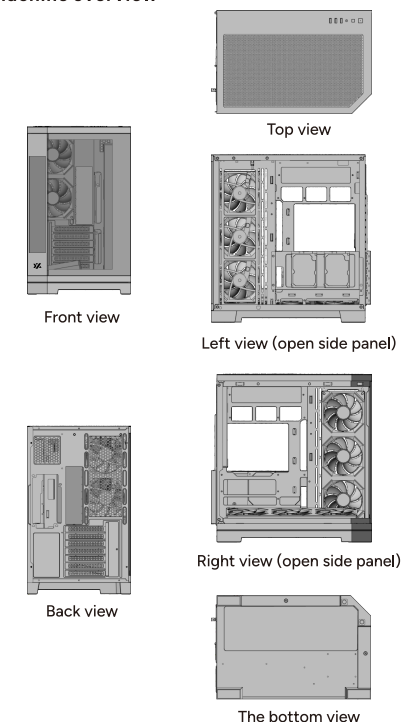

F Chassis disassembly diagram

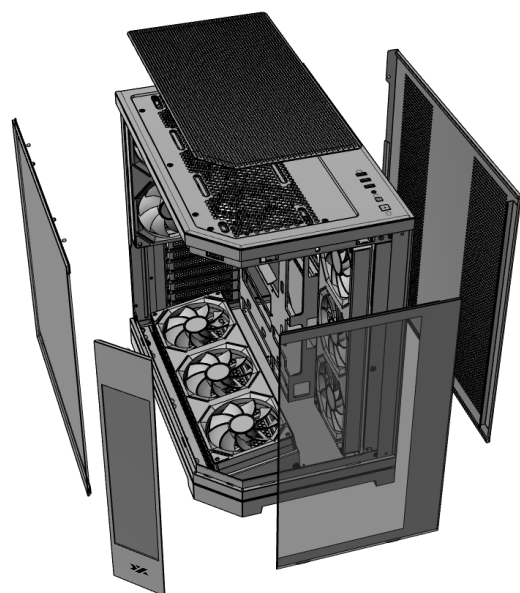


G Remove and install side panels

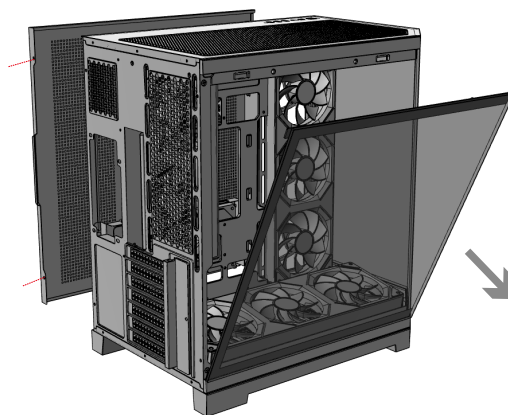


The way of Side glass panel opens is by Clip (without screws).
Remove the iron side plate: remove the two screws at the rear.

H The power supply installation

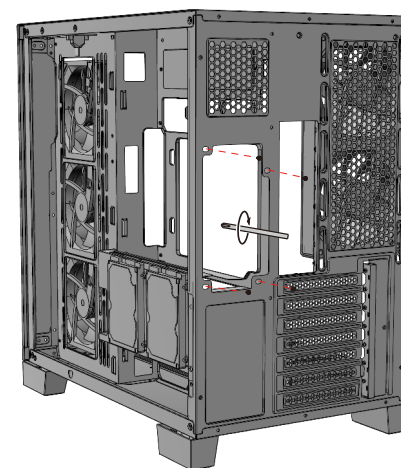


The power supply can be fixed by aligning the screw in the figure to the hole position
Note: different types of power supply, hole location may be slightly different, take the actual object as the standard

I Motherboard installation

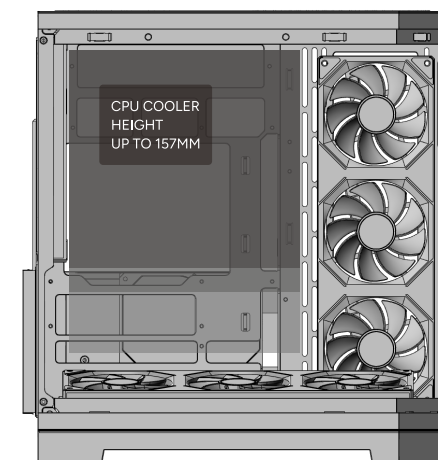


According to the motherboard type (ATX/M-ATX/ITX), the copper pillars may need to be re-arranged manually according to the fixing locations specific to your motherboard
CPU Height limit: 157mm

J The graphics card installation

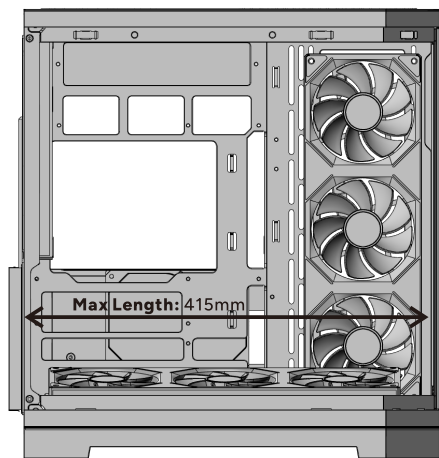


K Panel disassembly

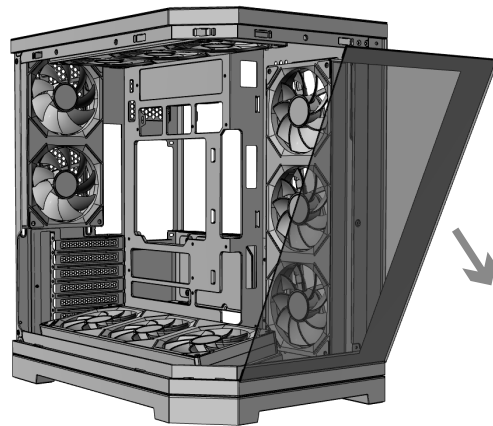

The way of Front glass panel opens is by Clip (without screws).


L Fan installation

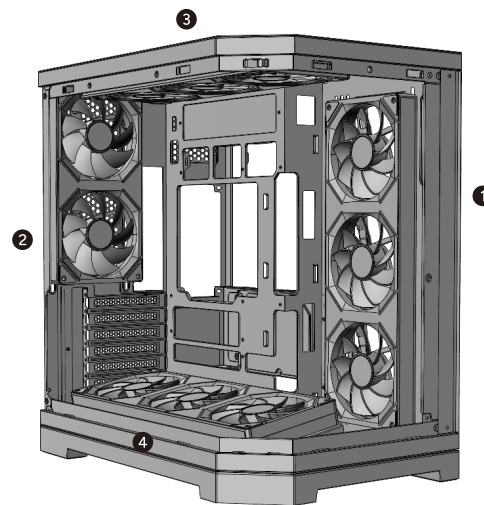

Fan compatibility

- ① MB tray: 3 x 120/ 2 x 140mm
- ② Rear: 2 x 120mm
- ③ Top: 3 x 120/ 2 x 140mm
- ④ Bottom: 3 x 120mm


M Water cooling installation

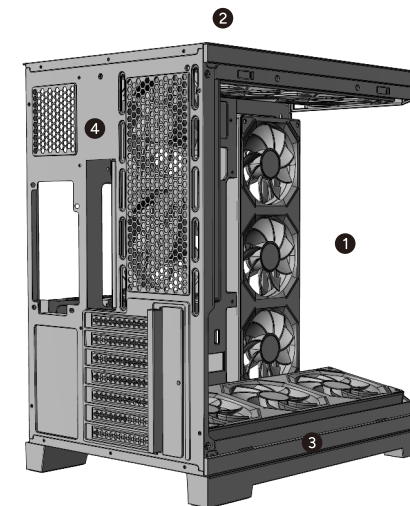

Radiator Support

- ① MB tray: 280/240mm
- ② Top: 360/280/240mm
- ③ Bottom: 360/280/240mm (Removed fan bracket)
- ④ Rear: 120mm

N SSD/HDD installation

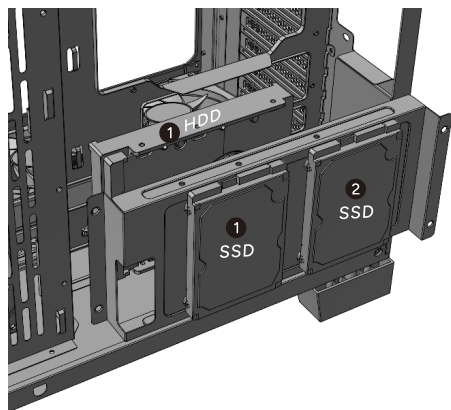

2*SSD 1*HDD

Push the SSD/HDD into the slot, align the screw holes, and lock the screws.

O Connect the LCD display

Step 1

Take out the small 4pin to DuPont 9pin link cable, and connect the small 4pin to this interface. (Pay attention to the direction and the fool-proof port, and do not connect it incorrectly.)


Step 2

According to the product's usage scenario, install the L bracket and hang it on the water-cooled exhaust pipe. You can also use the type C interface cable as per the product's usage requirements.

Step 3

When placing the chassis inside: You can use a 4-pin to DuPont 9-pin connection cable or a type C interface to DuPont 9-pin connection cable to connect the DuPont 9-pin to the USB interface at the bottom of the motherboard.

When placing the case externally: You can use the DuPont 9-pin to USB adapter cable, or the type C interface to DuPont 9-pin adapter cable to connect the two cables in series. Connect the USB interface to the USB interface on the back of the motherboard.

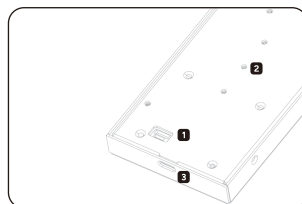


IMPORTANT!

- 1- THE SCREEN REQUIRES SPECIAL SOFTWARE TO WORKS.
- 2- IMPORTANT! SHOULD INSTALL THE SOFTWARE YOU WILL FIND IN THE DOWNLOAD PAGE FOR THE SCREEN WORKS.
- 3- PLEASE SCAN THIS QR, SEARCH FOR YOUR PRODUCT AND DOWNLOAD THE SOFTWARE.



P PWM function + ARGB controller user instruction

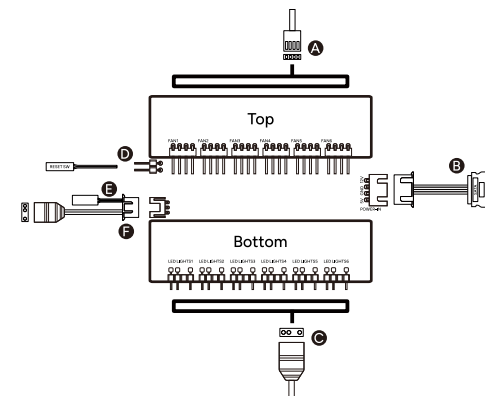

- Ⓐ Connected with 3 pcs small PWM 4PIN.
- Ⓑ SATA power connector (PSU).
- Ⓒ Interface for 5V3PIN LED wire, support 6pcs FANs.
- Ⓓ Can switch to the computer reset button.
- Ⓔ PWM speed adjusting line.
- Ⓕ Universal link to motherboard 5V 3pin connector.

To use this feature, hold down the reset key for 5 seconds.

The same side on the top and bottom



Find out more about us at
www.xyzpcgear.com

