



OMEGA

Instructions manual

A Package details

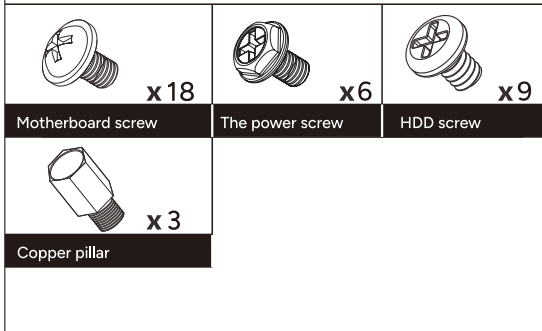


B Schematic diagram of wire interface

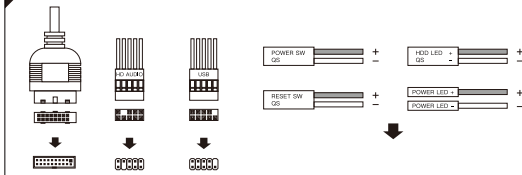


Please refer to the manual that came with your motherboard for any specific connection instructions


C Product size

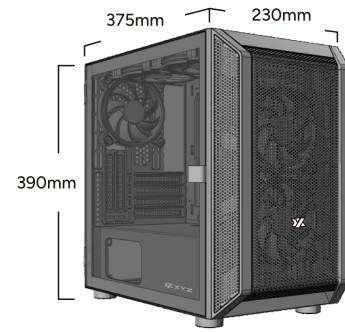


D IO panel introduction

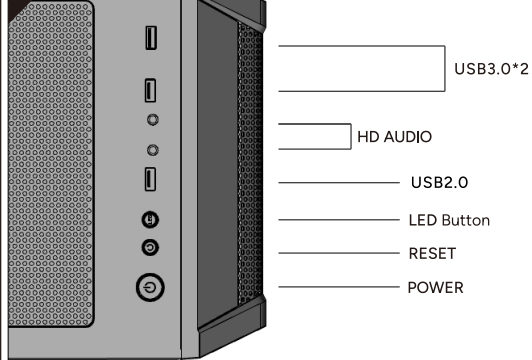


E Machine overview

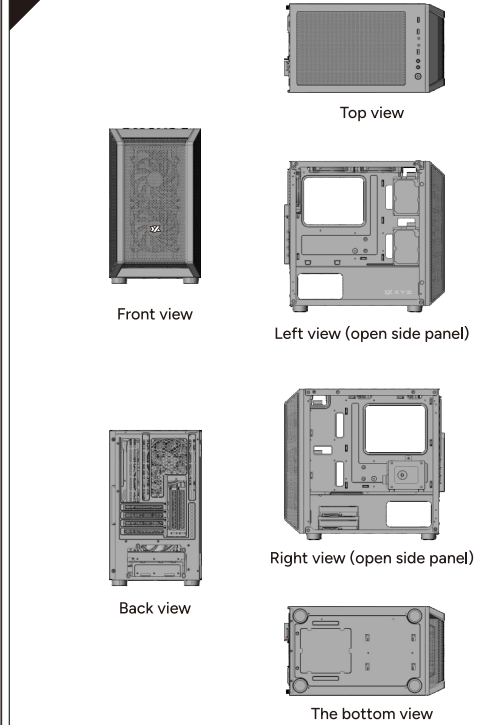

F Chassis disassembly diagram

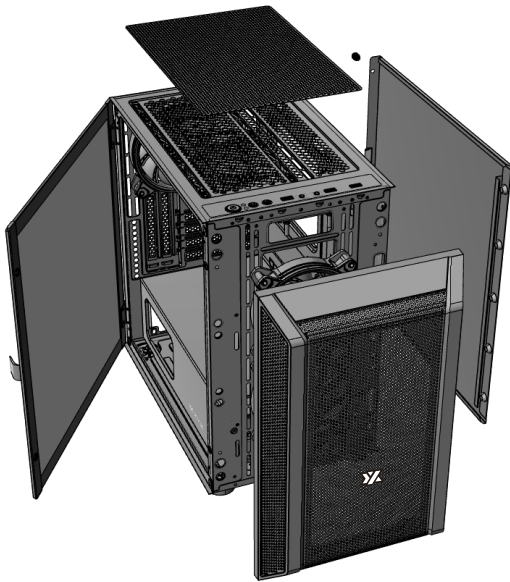


G Remove and install side panels

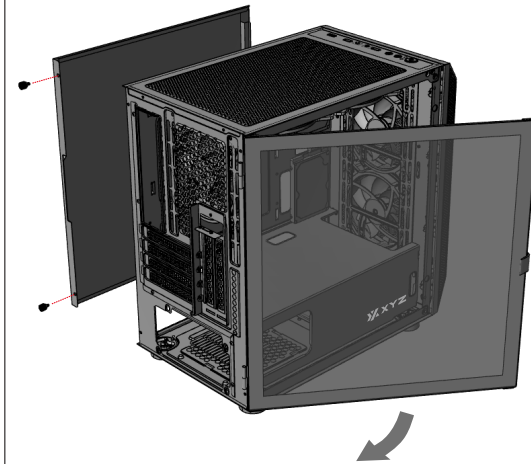


Glass side panel open: Pull the tab and pull it out
Metal side plate installation: buckle the side plate and fix it with two screws

H The power supply installation

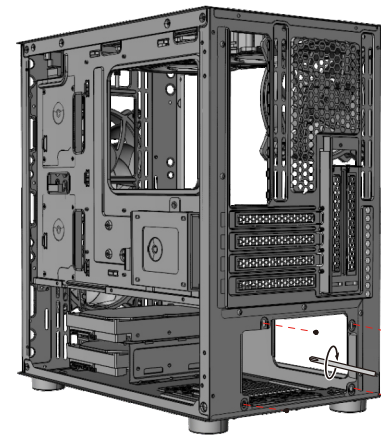


The power supply can be fixed by aligning the screw in the figure to the hole position
Note: different types of power supply, hole location may be slightly different, take the actual object as the standard

I Motherboard installation

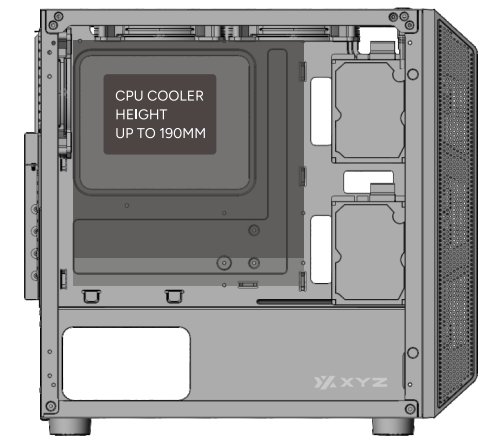


According to the motherboard type (M-ATX/ITX), the copper pillars may need to be re-arranged manually according to the fixing locations specific to your motherboard
CPU Height limit: 190mm

J The graphics card installation

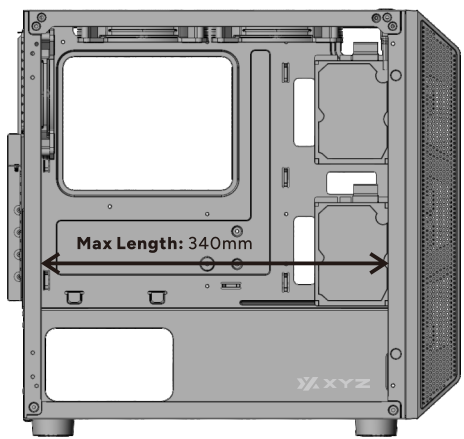


K Panel disassembly

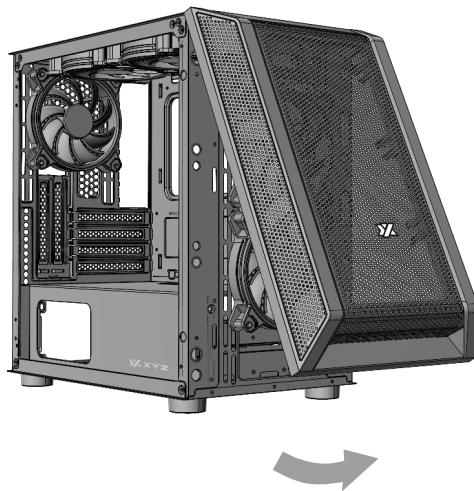

To remove the front panel of the case, pull it by hand, firmly from the bottom of the panel


L Fan installation

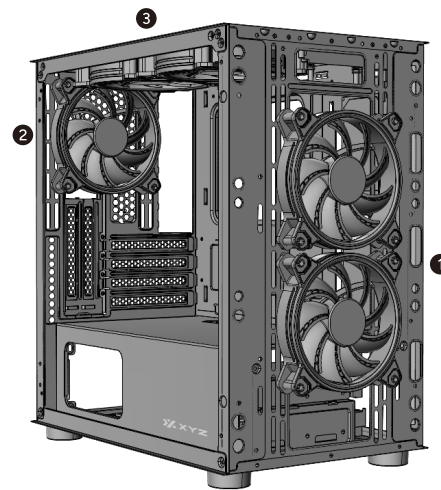

Fan compatibility

- ① Front: 2 x 120/140mm
- ② Rear: 1 x 120mm
- ③ Top: 2 x 120/140mm



M Water cooling installation

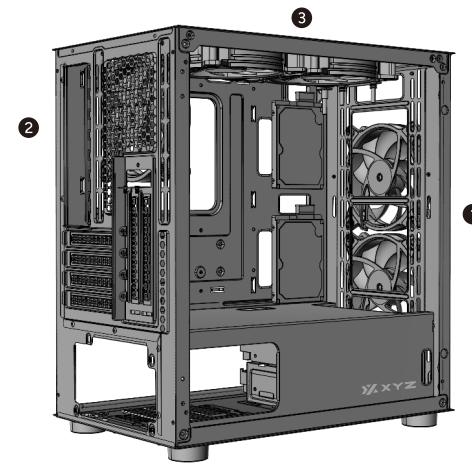

Radiator Support

- ① Front: 240mm
- ② Rear: 120mm
- ③ Top: 240mm


N SSD installation

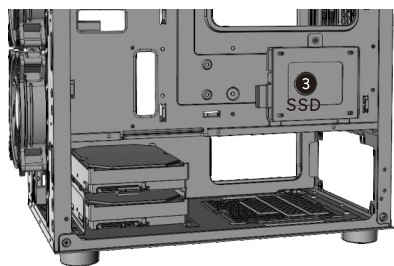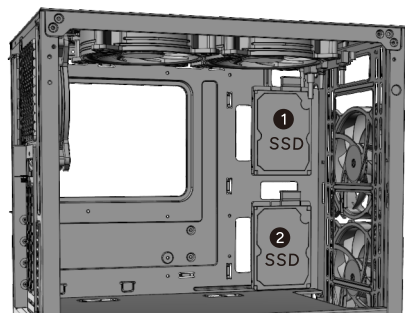

3*SSD

Align the SSD holes and fix them with screws.


O HDD installation

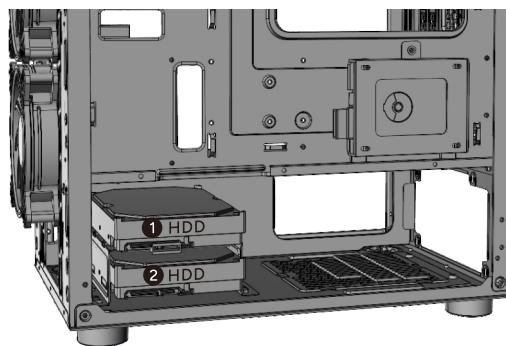

2*HDD

① Remove the hard disk rack and secure the hard disk with screws.
② Lock the two slide rail screws on the left side of the HDD, slide them into the hard disk rack, and secure the right side of the hard disk with screws.

P PWM function + ARGB controller user instruction

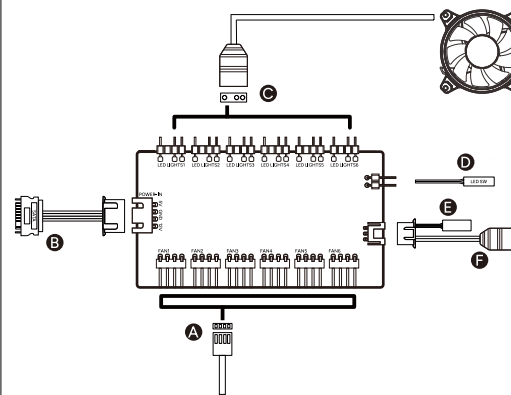

Ⓐ Connected with 3 pcs small PWM 4PIN.
Ⓑ SATA power connector (PSU).
Ⓒ Interface for 5V3PIN LED wire, support 6pcs FANS.
Ⓓ Can switch to the computer LED button.
Ⓔ PWM speed adjusting line.
Ⓕ Universal link to motherboard 5V 3pin connector.
To use this feature, hold down the reset key for 5 seconds.

XYZ



Find out more about us at www.xyzpcgear.com