



Dive into your next dimension


QUANTUM

Instructions manual

A Package details



 x 21	 x 6	 x 12
Motherboard screw	The power screw	HDD screws
 x 3	 x 1	 x 8
Copper pillar	Copper pillar sleeve	OD snap
 x 12	 x 5	 x 6
Fan screws (long)	Velcro	Cable ties

B Schematic diagram of wire interface

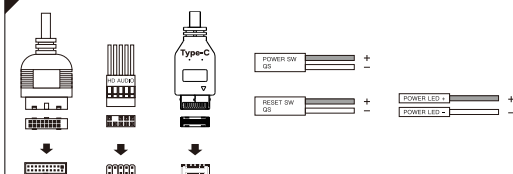


Please refer to the manual that came with your motherboard for any specific connection instructions

C Product size

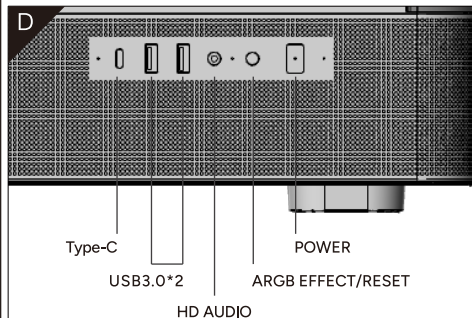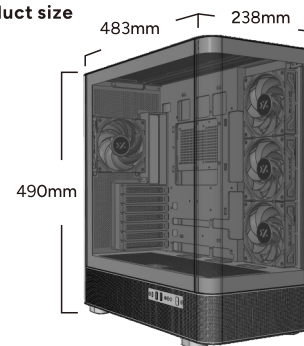


IO panel introduction


E Machine overview

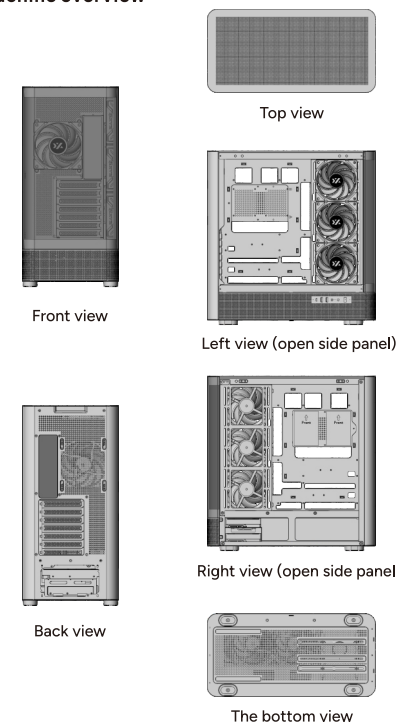

F Chassis disassembly diagram

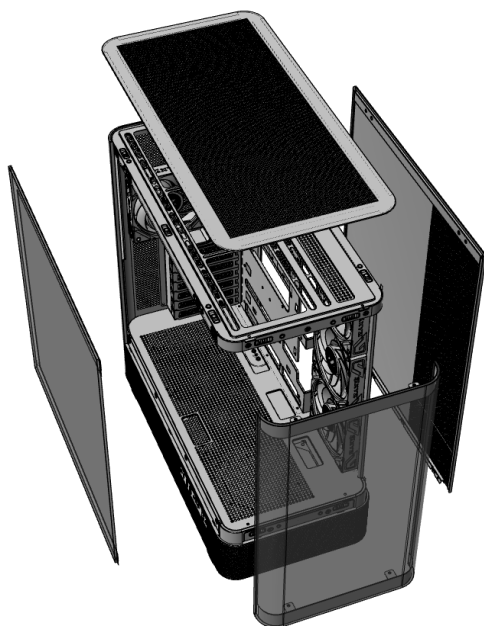


G Remove and install side panels

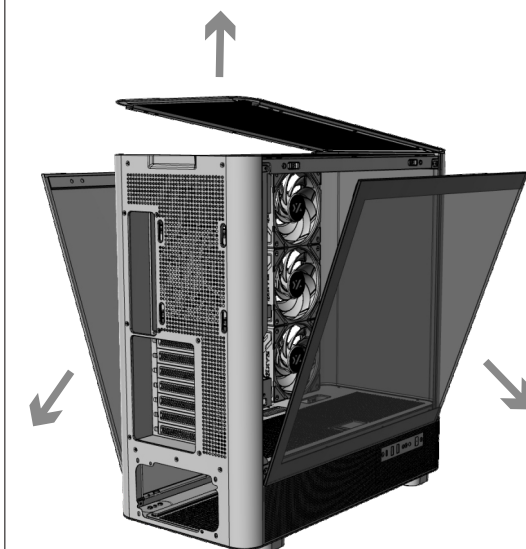


Open the top panel from the back, then open the side panel by Clip (without screws).

H The power supply installation

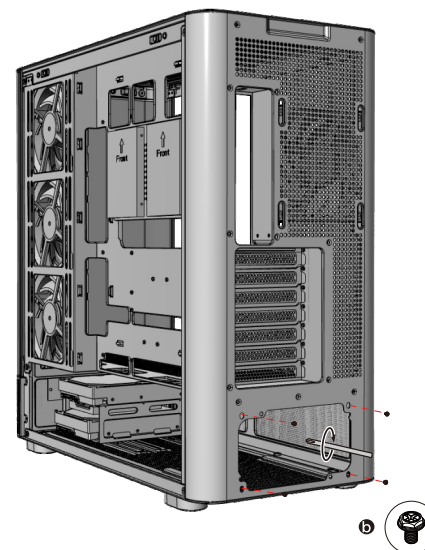


The power supply can be fixed by aligning the screw in the figure to the hole position
Note: different types of power supply, hole location may be slightly different, take the actual object as the standard

I Motherboard installation

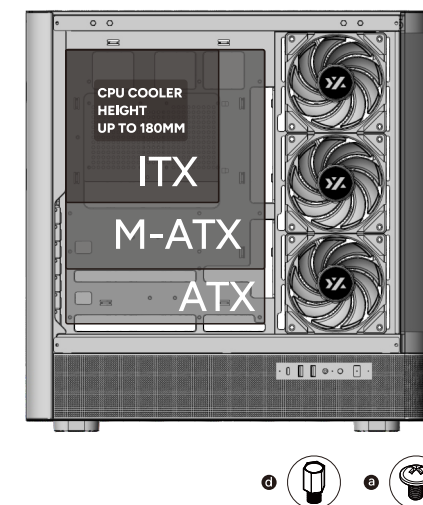


According to the motherboard type (ATX/M-ATX/ITX), the copper pillars may need to be re-arranged manually according to the fixing locations specific to your motherboard
CPU Cooler Height limit: 180mm

J The graphics card installation

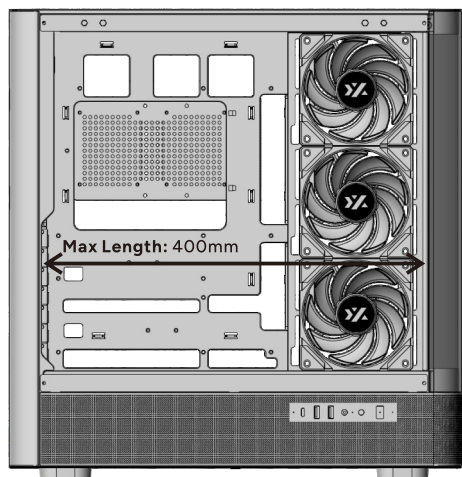


K Panel disassembly

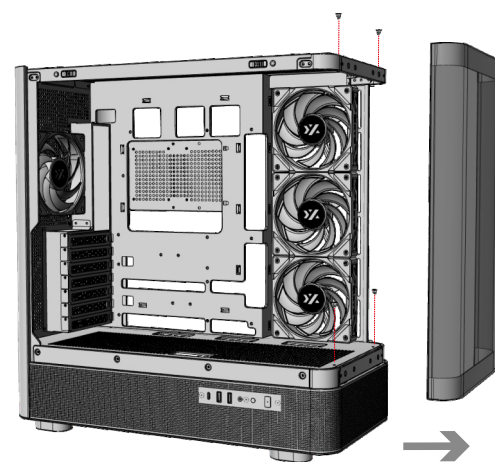

Remove the top glass panel, unscrew the inner screws, and lift the front panel up.


L Fan installation

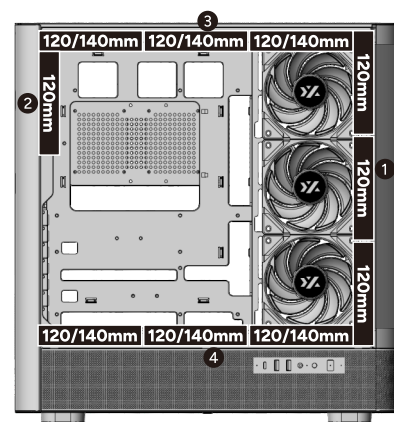

Fan compatibility

- 1 MB tray: 3 x 120 (Pre-installed)
- 2 Rear: 1 x 120mm (Pre-installed)
- 3 Top: 3 x 120 / 140mm
- 4 Bottom: 3 x 120 / 140mm


M Water cooling installation

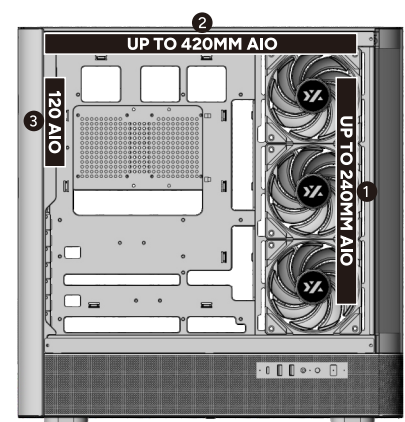

Radiator Support

- 1 MB tray: 240mm
- 2 Top: 240/280/360/420mm
- 3 Rear: 120mm

N SSD/HDD installation

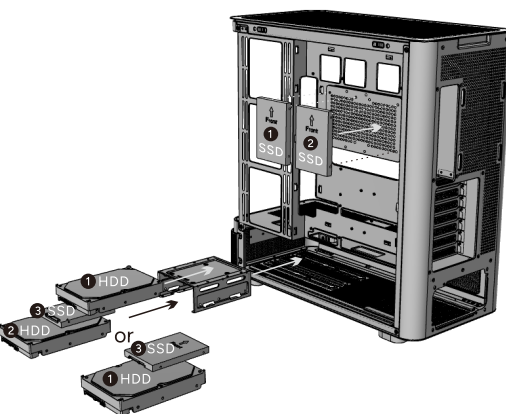


2*HDD + 3*SSD
or
1*HDD + 3*SSD



Push the SSD/HDD into the slot, align the screw holes, and lock the screws.

O PWM function + ARGB controller user instruction

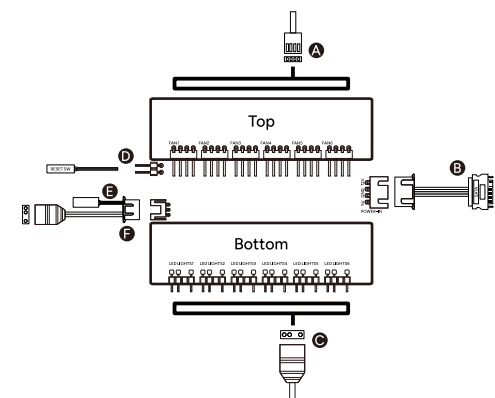

- A Connected with 3 pcs small PWM 4PIN.
 - B SATA power connector (PSU).
 - C Interface for 5V3PIN LED wire, support 6pcs FANs.
 - D Can switch to the computer reset button.
 - E PWM speed adjusting line.
 - F Universal link to motherboard 5V 3pin connector.
- To use this feature, hold down the reset key for 5 seconds.

The same side on the top and bottom



Find out more about us at
www.xyzpcgear.com