



Dive into your next dimension


TITANIUM

TITANIUM MESH
Instructions manual

A Package details


 x17	 x6	 x8
 x3	 x5	
Motherboard screw	The power screw	HDD screw
Copper pillar	Cable Tie	

B Schematic diagram of wire interface

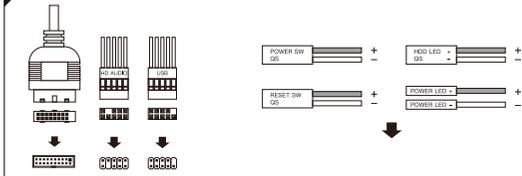


Please refer to the manual that came with your motherboard for any specific connection instructions


C Product size

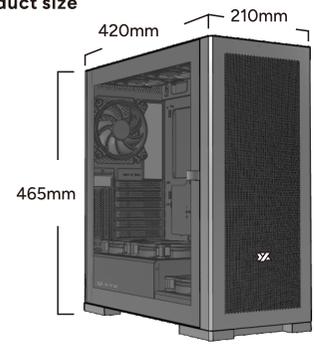

D IO panel introduction

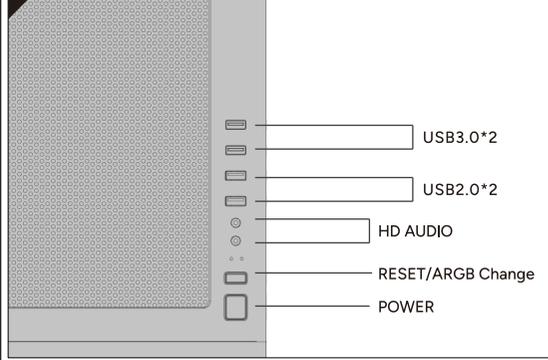


E Machine overview

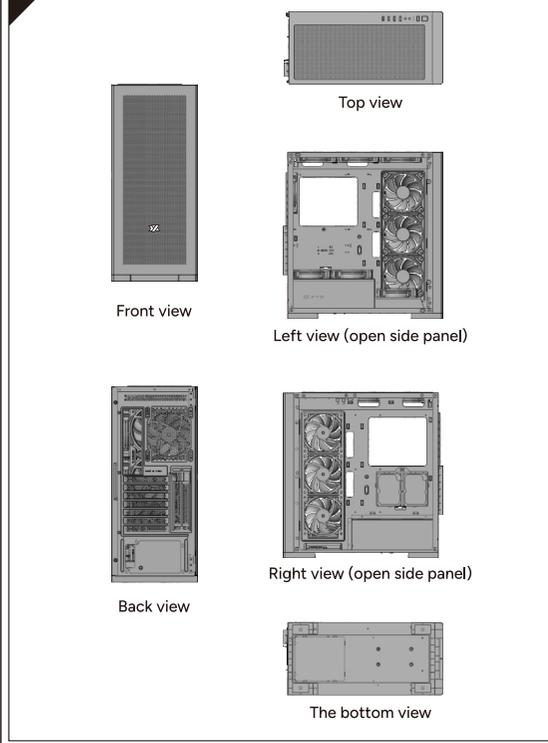

F Chassis disassembly diagram




G Remove and install side panels

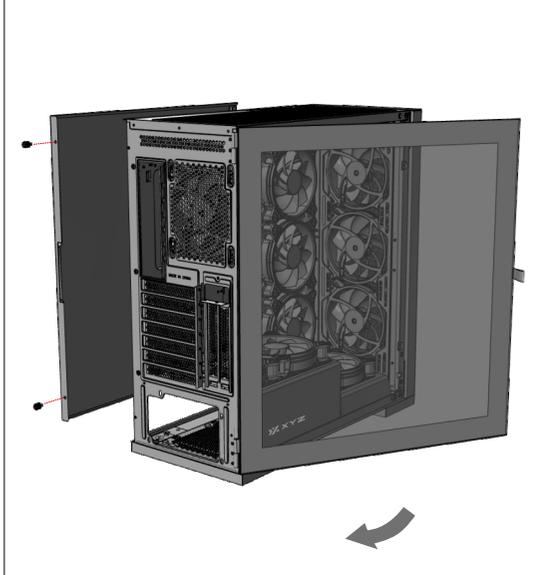


Glass side panel open: Pull the tab and pull it out
Metal side plate installation: buckle the side plate and fix it with two screws

H The power supply installation

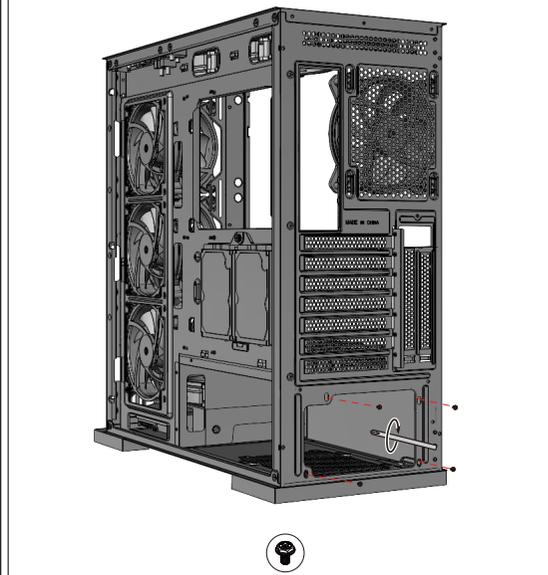


The power supply can be fixed by aligning the screw in the figure to the hole position
Note: different types of power supply, hole location may be slightly different, take the actual object as the standard

I Motherboard installation

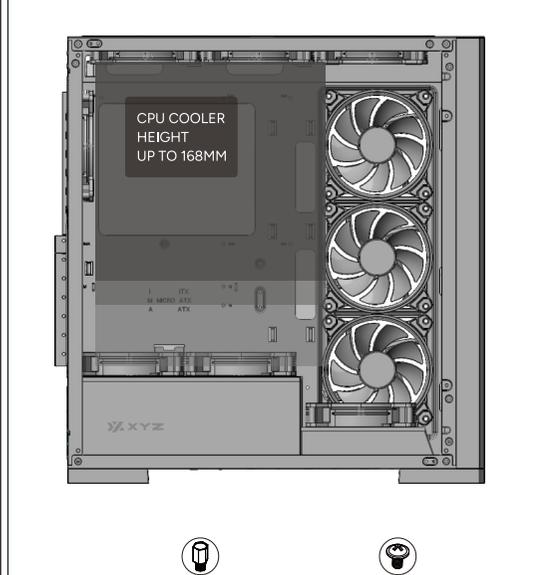


According to the motherboard type (ATX/M-ATX/ITX), the copper pillars may need to be re-arranged manually according to the fixing locations specific to your motherboard
CPU Height limit: 168mm

J The graphics card installation

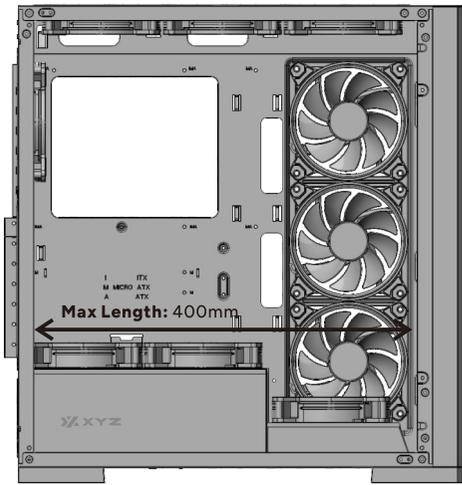


K Panel disassembly

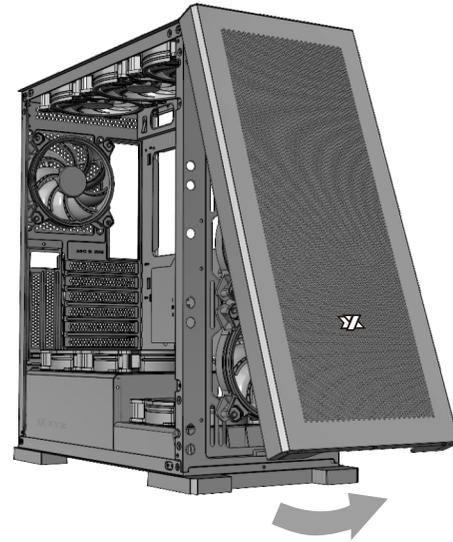

To remove the front panel of the case, pull it by hand, firmly from the bottom of the panel

L Fan installation

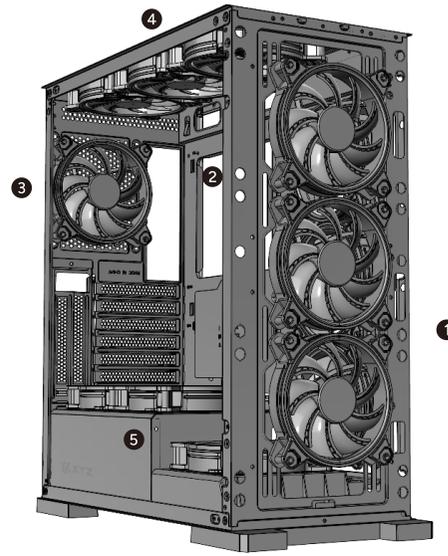


- Fan compatibility**
- ① Front: 3 x 120mm
 - ② MB tray: 3 x 120mm
 - ③ Rear: 1 x 120mm
 - ④ Top: 3 x 120mm
 - ⑤ Bottom: 3 x 120mm(one HDD)

M Water cooling installation



- Radiator Support**
- ① MB tray: 240mm
 - ② Rear: 120mm
 - ③ Top: 360mm


N SSD installation

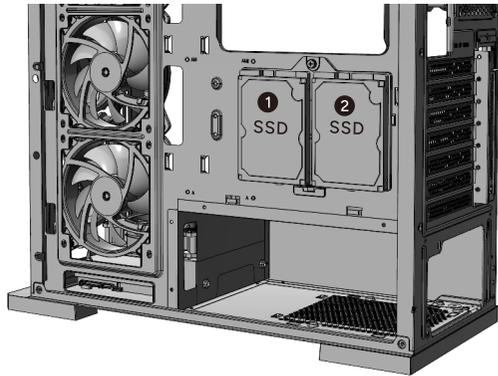

2*SSD

Align the screw holes of the hard disk with the hard diskbracket and fix it with SSDscrews.

O HDD installation

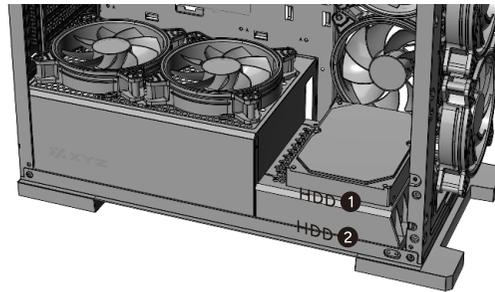


2*HDD

- ① one HDD or one Fan

Align the screw holes of the hard disk with the hard diskbracket and fix it with HDDscrews.

P PWM function + ARGB controller user instruction

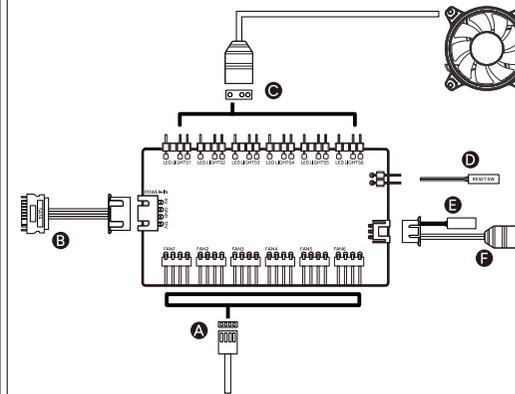

- A Connected with 3 pcs small PWM 4PIN.
 - B SATA power connector (PSU).
 - C Interface for 5V3PIN LED wire, support 6pcs FANS.
 - D Can switch to the computer reset button.
 - E PWM speed adjusting line.
 - F Universal link to motherboard 5V 3pin connector.
- To use this feature, hold down the reset key for 5 seconds.

XYZ



Find out more about us at www.xyzpcgear.com