





 


XYZ

Dive into your next dimension


TRIFECTA

Instructions manual

A Package details


 x17	 x6	 x8
 x3	 x12	 x5
 x1		

B Schematic diagram of wire interface

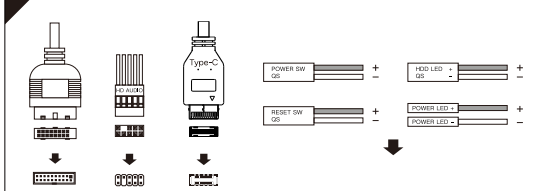

Please refer to the manual that came with your motherboard for any specific connection instructions


C Product size

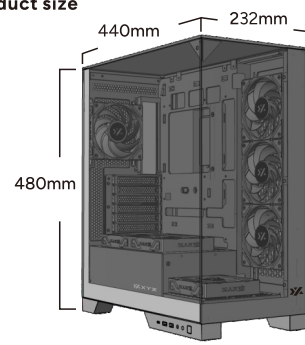


Type-C
USB3.0*2
HD AUDIO
POWER
RESET/ARGB light

IO panel introduction


E Machine overview

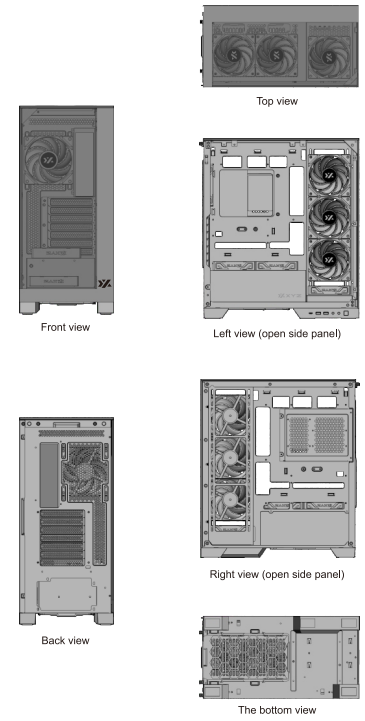

F Chassis disassembly diagram

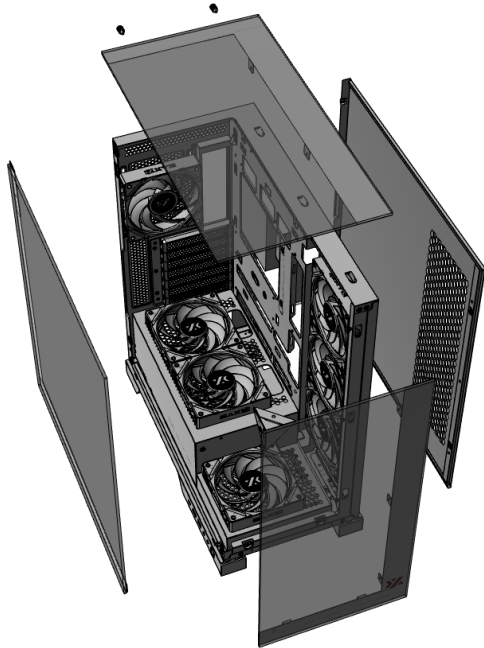


G Remove and install side panels

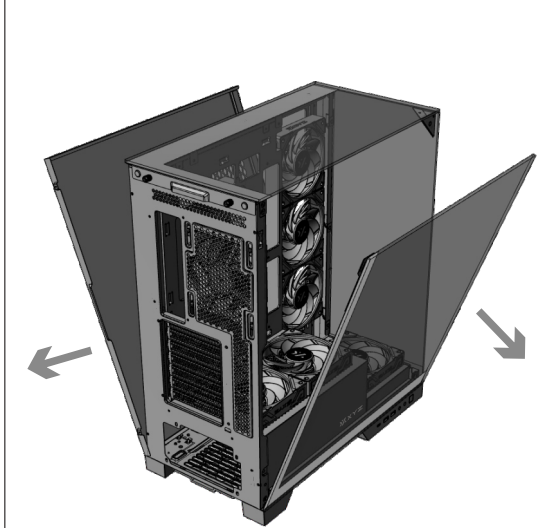


The way of Side glass panel opens is by Clip (without screws).

H The power supply installation

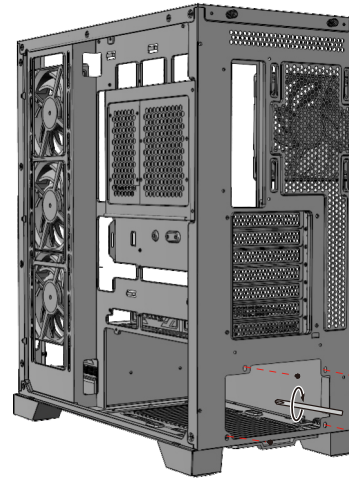


The power supply can be fixed by aligning the screw in the figure to the hole position
Note: different types of power supply, hole location may be slightly different, take the actual object as the standard

I Motherboard installation

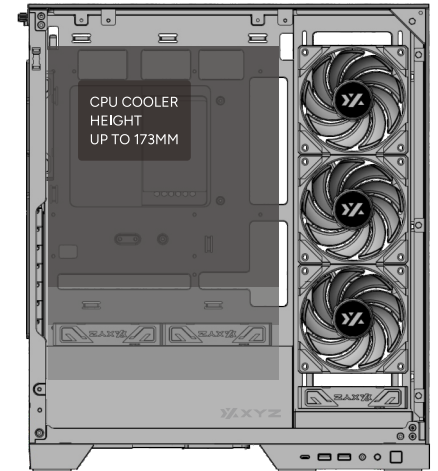

According to the motherboard type (ATX/M-ATX/ITX), the copper pillars may need to be re-arranged manually according to the fixing locations specific to your motherboard
CPU Height limit: 173mm


J The graphics card installation

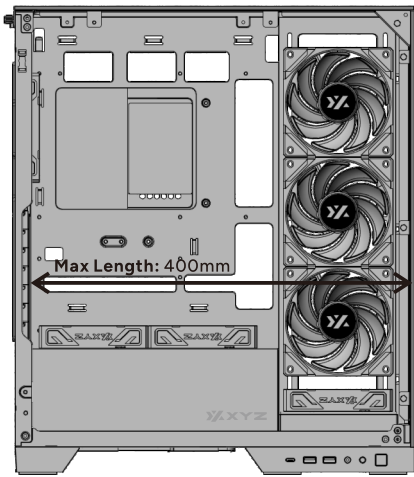

Max Length: 400mm


Remove the top glass panel, unscrew the inner screws, and lift the front panel up.

K Panel

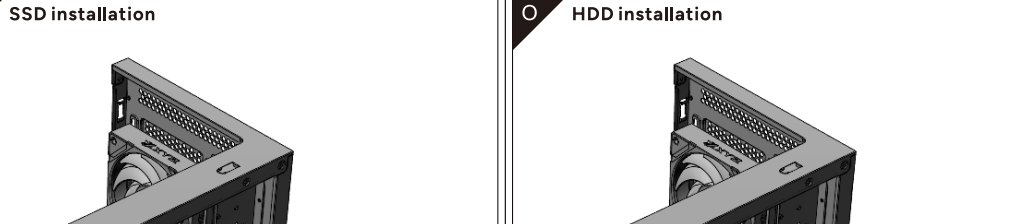

Remove the top glass panel, unscrew the inner screws, and lift the front panel up.


L Fan installation

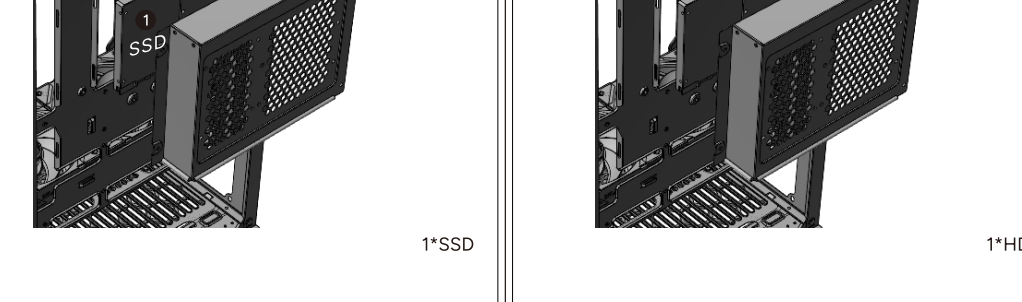

Fan compatibility

- ① MB tray: 3 x 120mm
- ② Rear: 1 x 120mm
- ③ PSU cover: 3 x 120mm

 
M Water cooling installation



Radiator Support

- ① MB tray: 120/240/280/360mm
- ② Rear: 120mm

N SSD installation

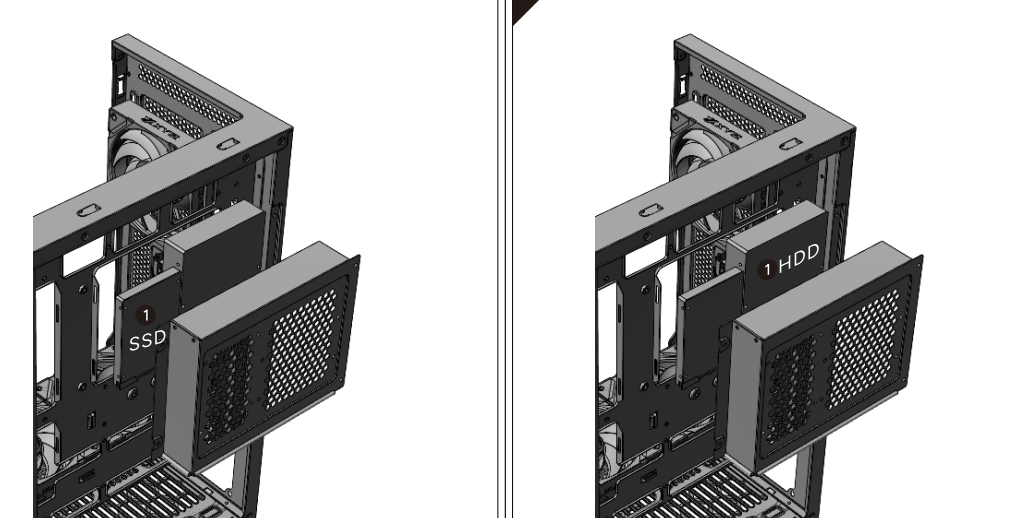

1*SSD

Align the SSD holes and fix them with screws.

O HDD installation

1*HDD

Align the hard disk holes and fix them with HDD screws.

P PWM function + ARGB controller user instruction

- Ⓐ Connected with 3 pcs small PWM 4PIN.
 - Ⓑ SATA power connector (PSU).
 - Ⓒ Interface for 5V3PIN LED wire, support 6pcs FANS.
 - Ⓓ Can switch to the computer reset button.
 - Ⓔ PWM speed adjusting line.
 - Ⓕ Universal link to motherboard 5V 3pin connector.
- To use this feature, hold down the reset key for 5 seconds.



Find out more about us at www.xyzpcgear.com