 
 



AQUAPULSE

 User Manual



















G3

Intel Screw Stud x4

G4

2011 Screw Stud x4



Case Screws 240/280: x8 360: x12











Find out more about us at www.xvzpcgear.com




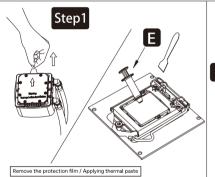

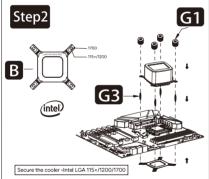


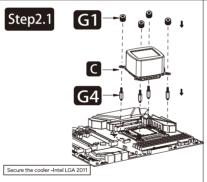

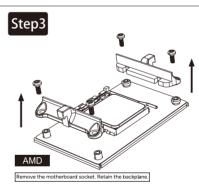

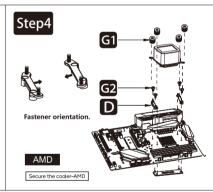



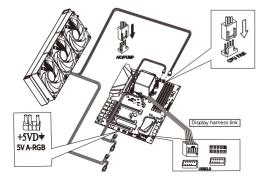


Please link the display to the motherboard USB2 0 interface (Generally in the lowermost position of the motherboard, according to the direction of the interface gap can be inserted guests can check according to the motherboard manual)

Connect the 3-pin connector from the pump unit to AIO/PUMP

Connect the 4-pin fan PWM connector to CPU_FAN socket on the motherboard

Connect the fan to the 5V ARGB socket on the motherboard

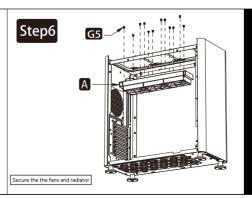

LAST STEP

IMPORTANT!

1- THE SCREEN REQUIRES SPECIAL SOFTWARE TO WORKS. 2- IMPORTANT! SHOULD INSTALL THE SOFTWARE YOU WILL FIND IN THE DOWNLOAD PAGE FOR THE SCREEN WORKS. 3- PLEASE SCAN THIS QR, SEARCH FOR YOUR PRODUCT AND DOWNLOAD THE SOFTWARE.

