XYZ

Dive into your next dimension

QUBEX
Instructions manual

A Package details

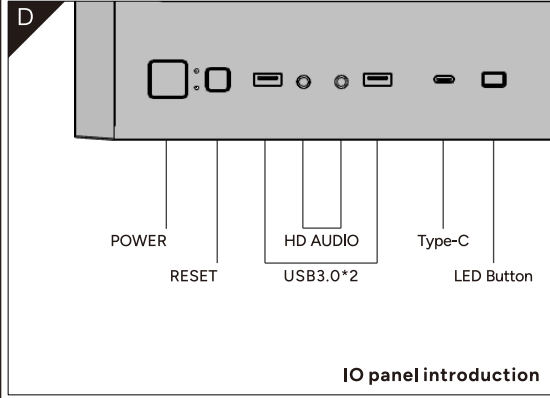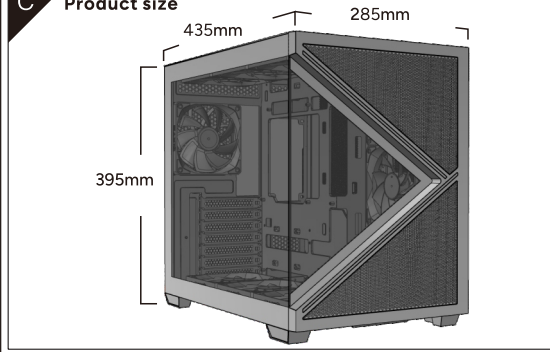|		
x10 Motherboard screw	**x5** The power screw	**x4** HDD screw
x3 Copper pillar	**x5** Cable Tie	

B Schematic diagram of wire interface

Type-C

POWER SW	+ −	HDD LED	+ −	+ −
RESET SW	+ −	POWER LED +		+ −
		POWER LED −		
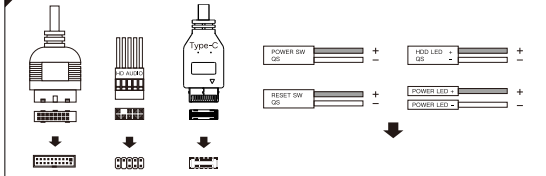
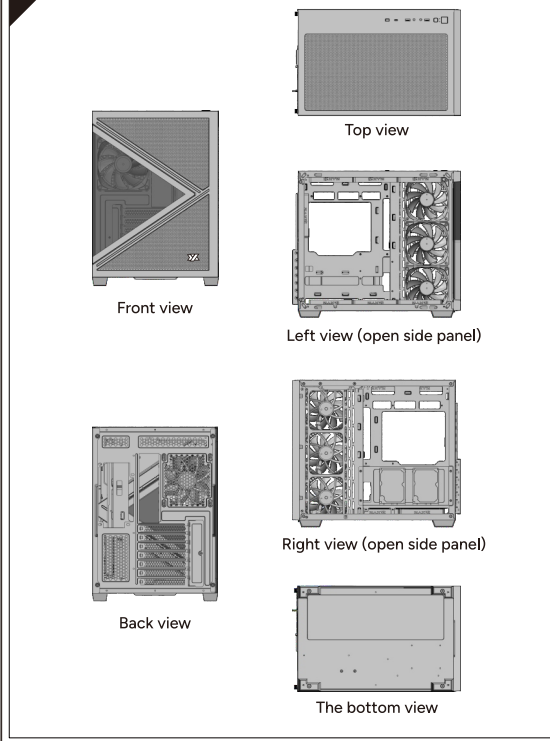Please refer to the manual that came with your motherboard for any specific connection instructions

C Product size

435mm | 285mm

395mm
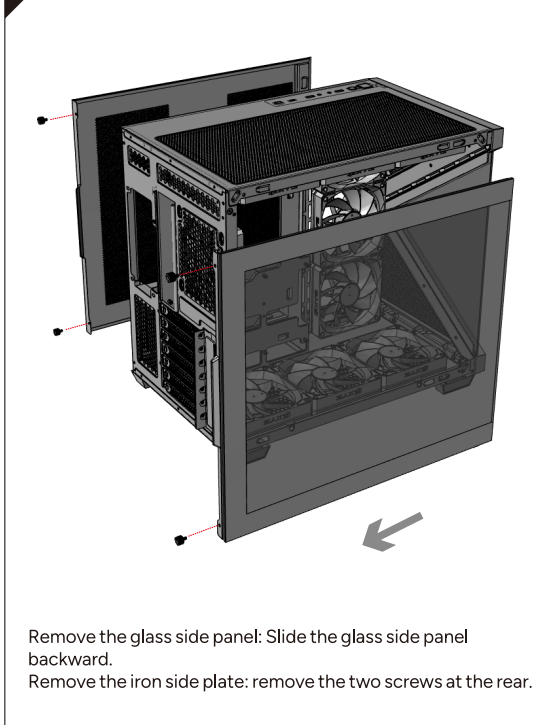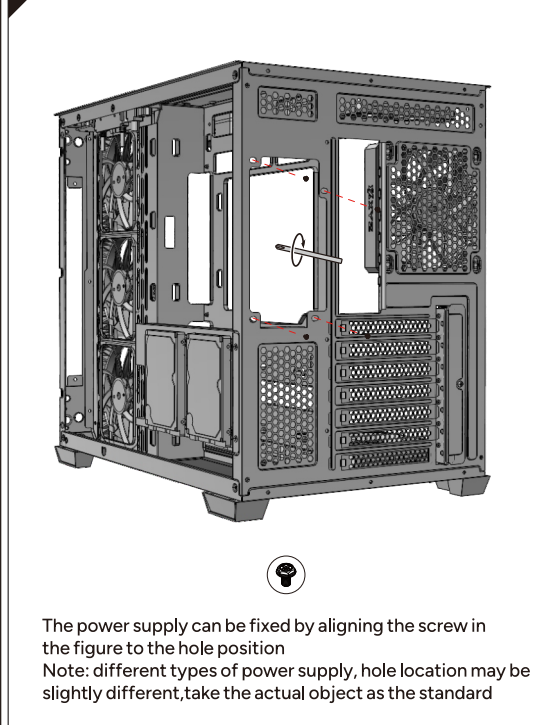
D

POWER   RESET   HD AUDIO   USB3.0*2   Type-C   LED Button

IO panel introduction

E Machine overview

Top view

Front view

Left view (open side panel)

Right view (open side panel)

Back view

The bottom view

F Chassis disassembly diagram
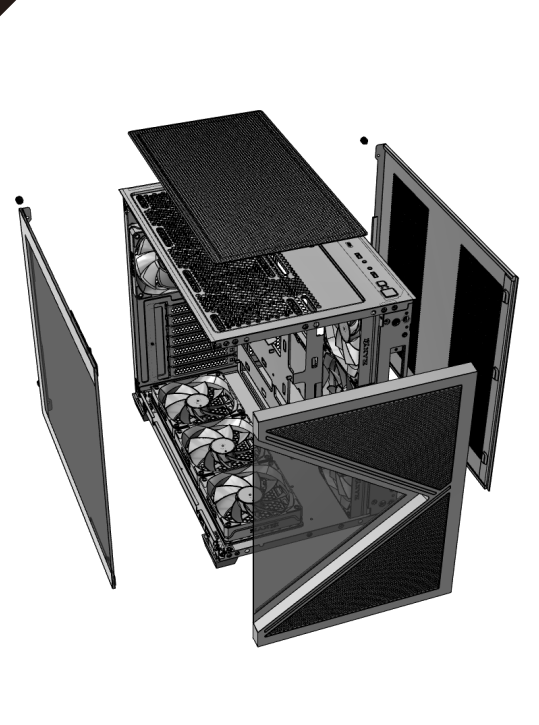
G Remove and install side panels

Remove the glass side panel: Slide the glass side panel backward.
Remove the iron side plate: remove the two screws at the rear.

H The power supply installation

The power supply can be fixed by aligning the screw in the figure to the hole position
Note: different types of power supply, hole location may be slightly different, take the actual object as the standard

I Motherboard installation

CPU COOLER HEIGHT UP TO 165MM
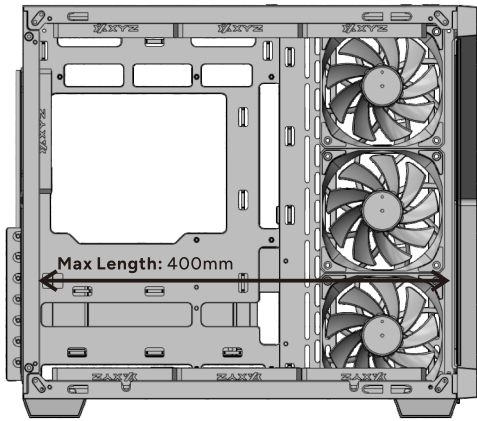
According to the motherboard type (ATX/M-ATX/ITX), the copper pillars may need to be re-arranged manually according to the fixing locations specific to your motherboard
CPU Height limit: 165mm
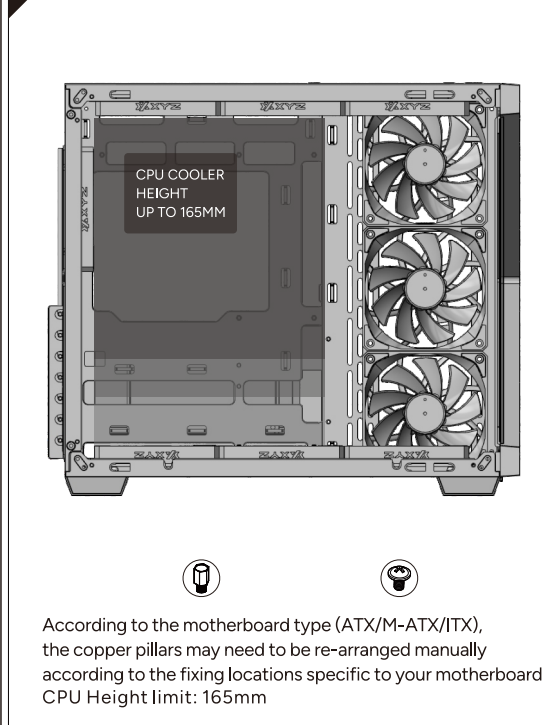
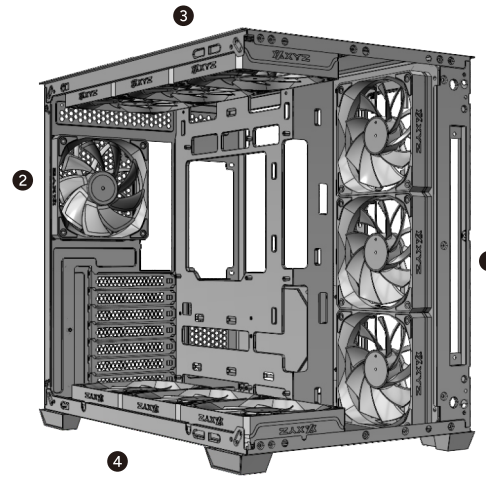## J　The graphics card installation

Max Length: 400mm
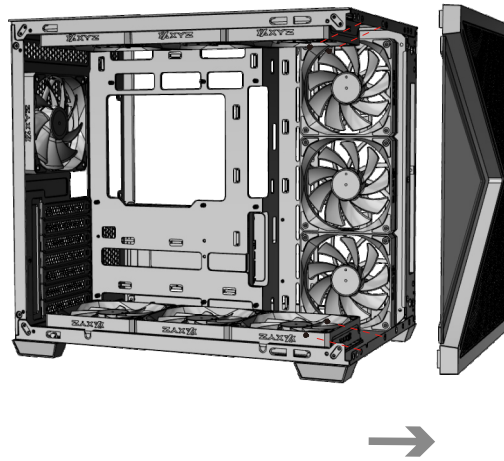
K　Panel

Installation: Fit the panel to the front panel and fix it with
screws from the inside of the chassis
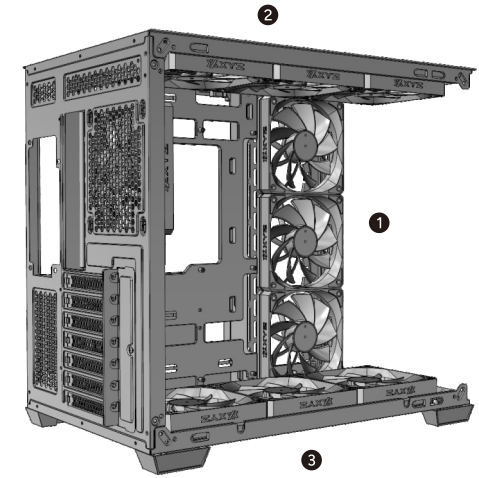Removal: Unscrew the screws from the inside of the chassis
and remove the panel

L　Fan installation

Fan compatibility　❶ MB tray: 3 x 120mm
　　　　　　　　　　❷ Rear: 1 x 120mm
　　　　　　　　　　❸ Top: 3 x 120mm
　　　　　　　　　　❹ Bottom: 3 x 120mm
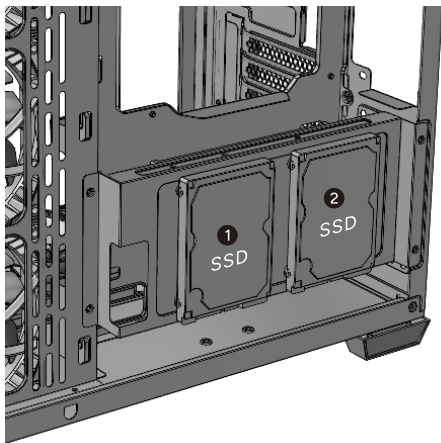
M　Water cooling installation

Radiator Support　❶ MB tray: 240/280mm
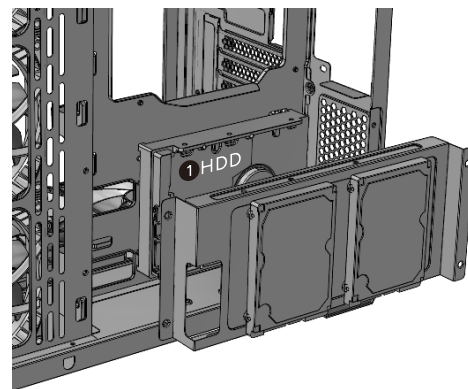　　　　　　　　　　❷ Top: 240/280/360mm
　　　　　　　　　　❸ Rear: 120mm

N　SSD installation

2*SSD

Align the SSD holes and fix them with screws.
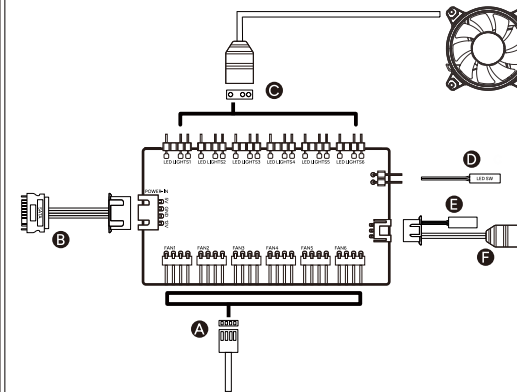
O　HDD installation

1*HDD

Align the hard disk holes and fix them with HDD screws.

P　PWM function + ARGB controller user instruction

ⓐ Connected with 3 pcs small PWM 4PIN.
ⓑ SATA power connector (PSU).
ⓒ Interface for 5V3PIN LED wire, support 6pcs FANs.
ⓓ Can switch to the computer LED button.
ⓔ PWM speed adjusting line.
ⓕ Universal link to motherboard 5V 3pin connector.
　 To use this feature, hold down the reset key for 5 seconds.

XYZ

Find out more about us at
www.xyzpcgear.com