





motherboard for any specific connection instructions

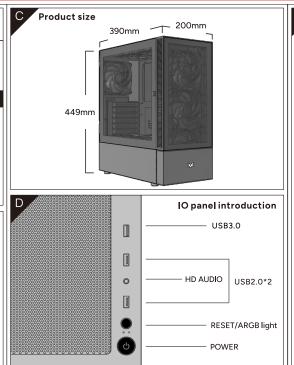


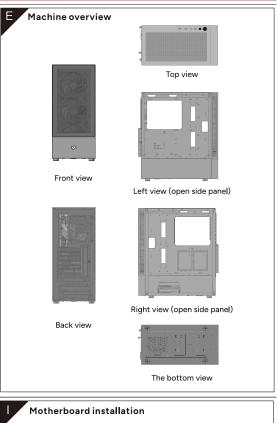


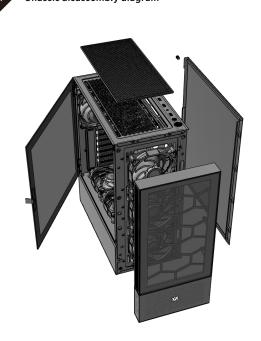


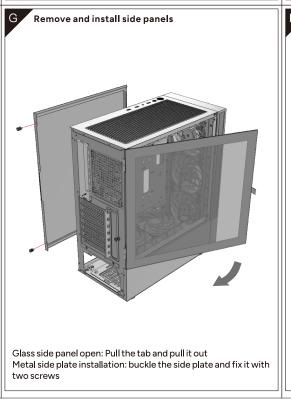





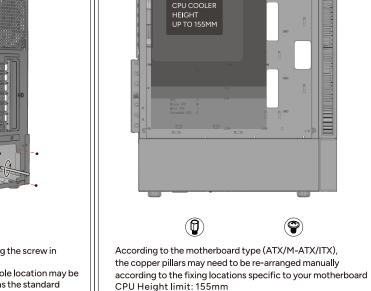

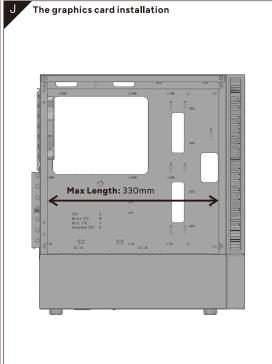

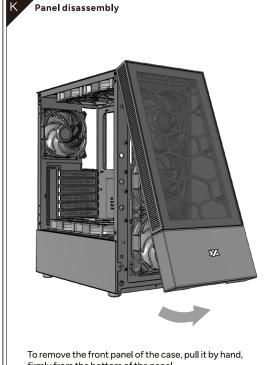

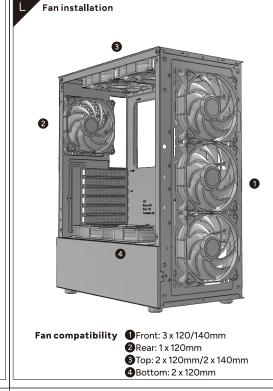

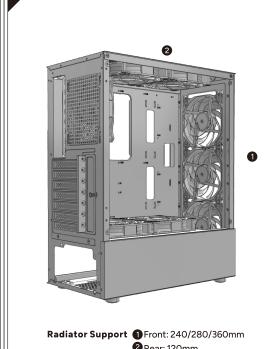


Water cooling installation

firmly from the bottom of the panel


2 Rear: 120mm




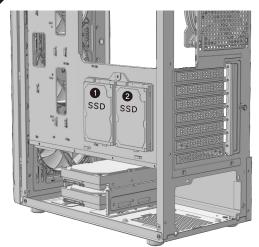


2*SSD

First fix the hole position with the hard disk cushioning pad, then fix it with SSDscrews.

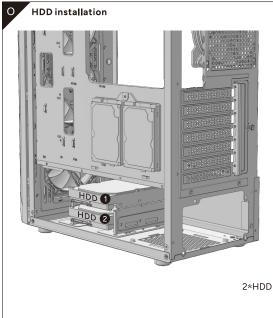



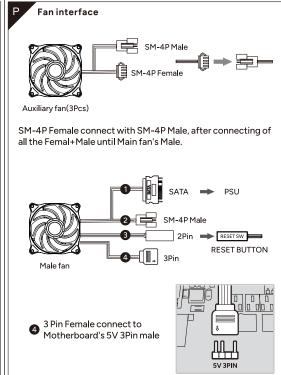





Find out more about us at www.xyzpcgear.com